

DIGITAL BOARD NEW LINE





SCHERMATA INIZIALE



AGGIUNGERE PAGINA



MATITA

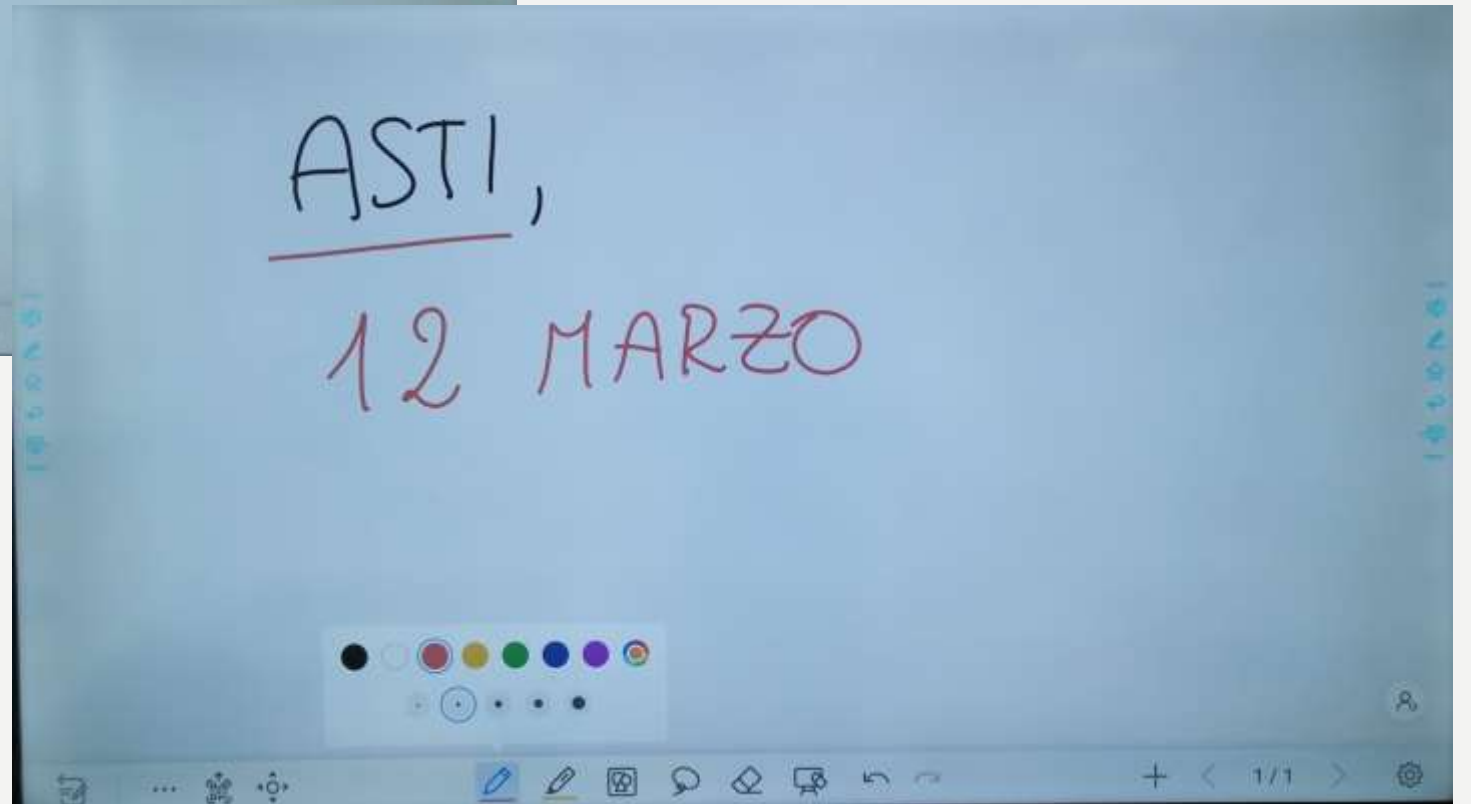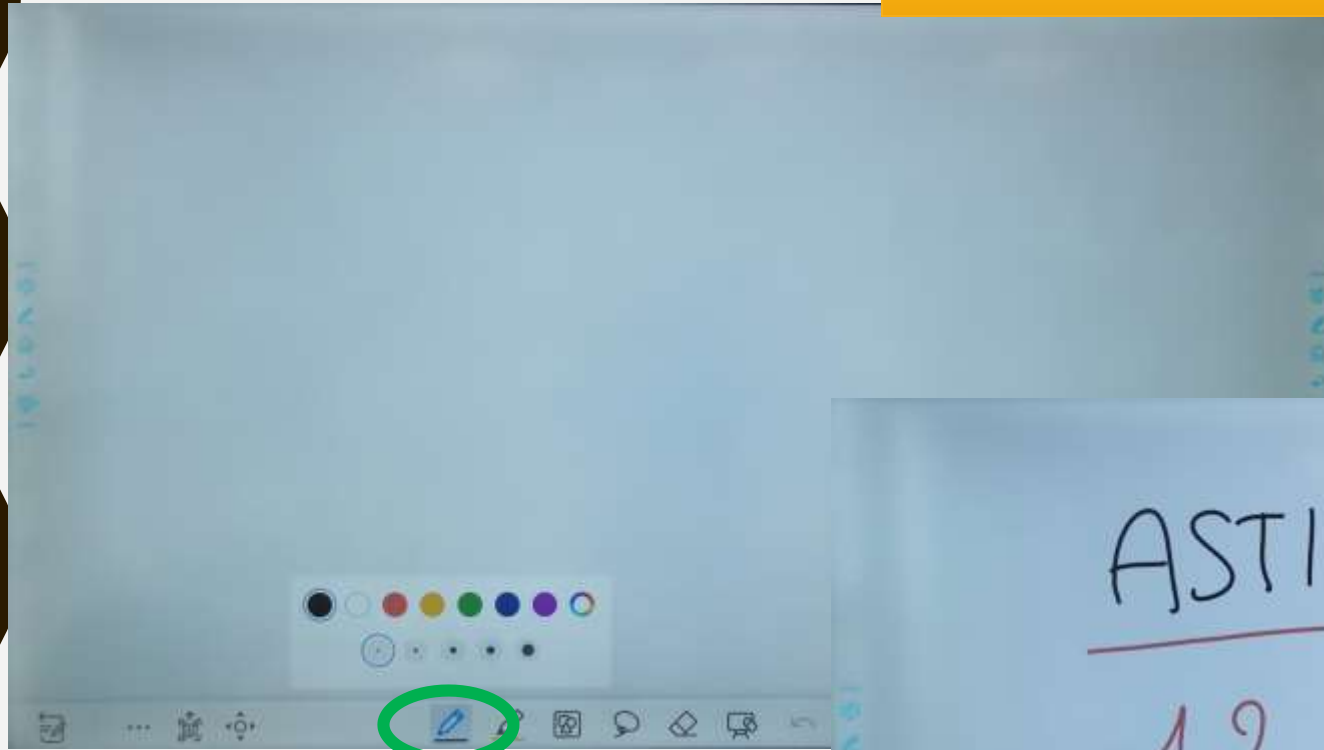



EVIDENZIATORE

ASTI,



12 MARZO



FIGURE GEOMETRICHE

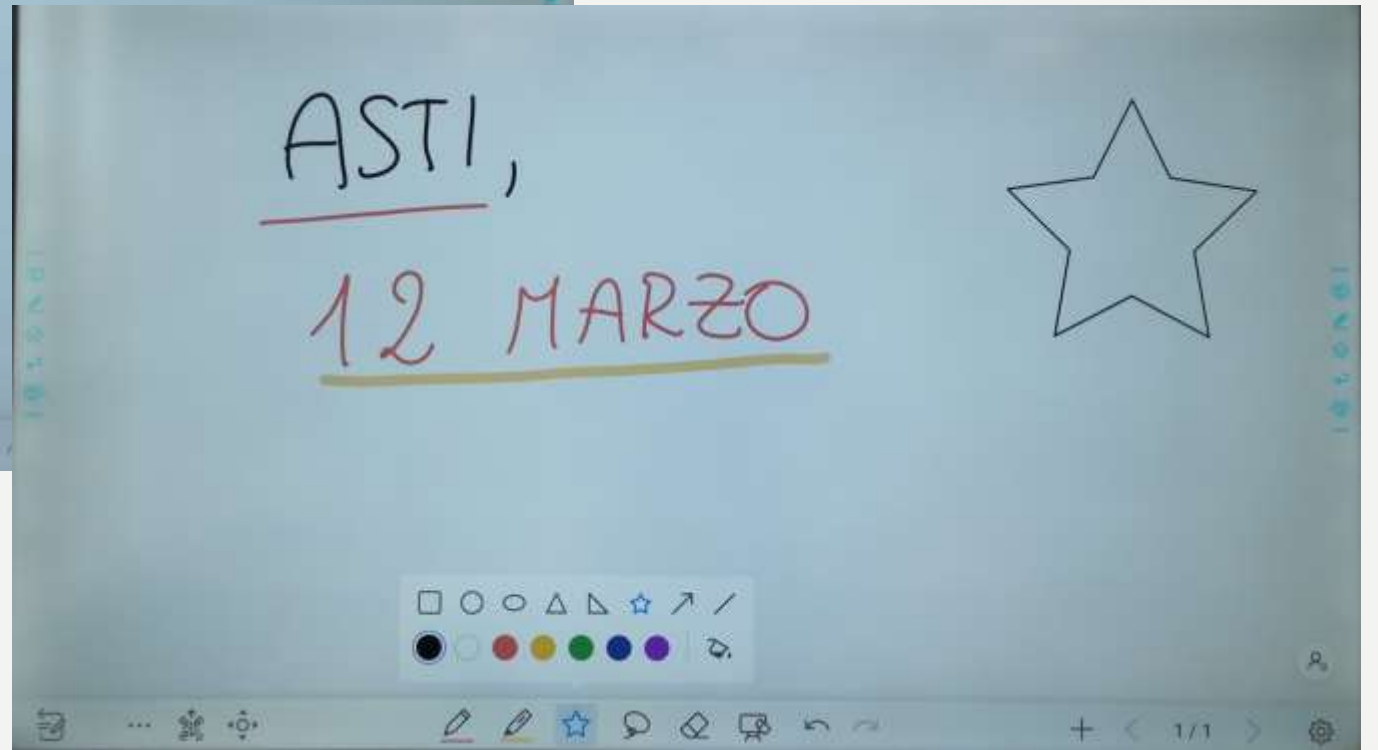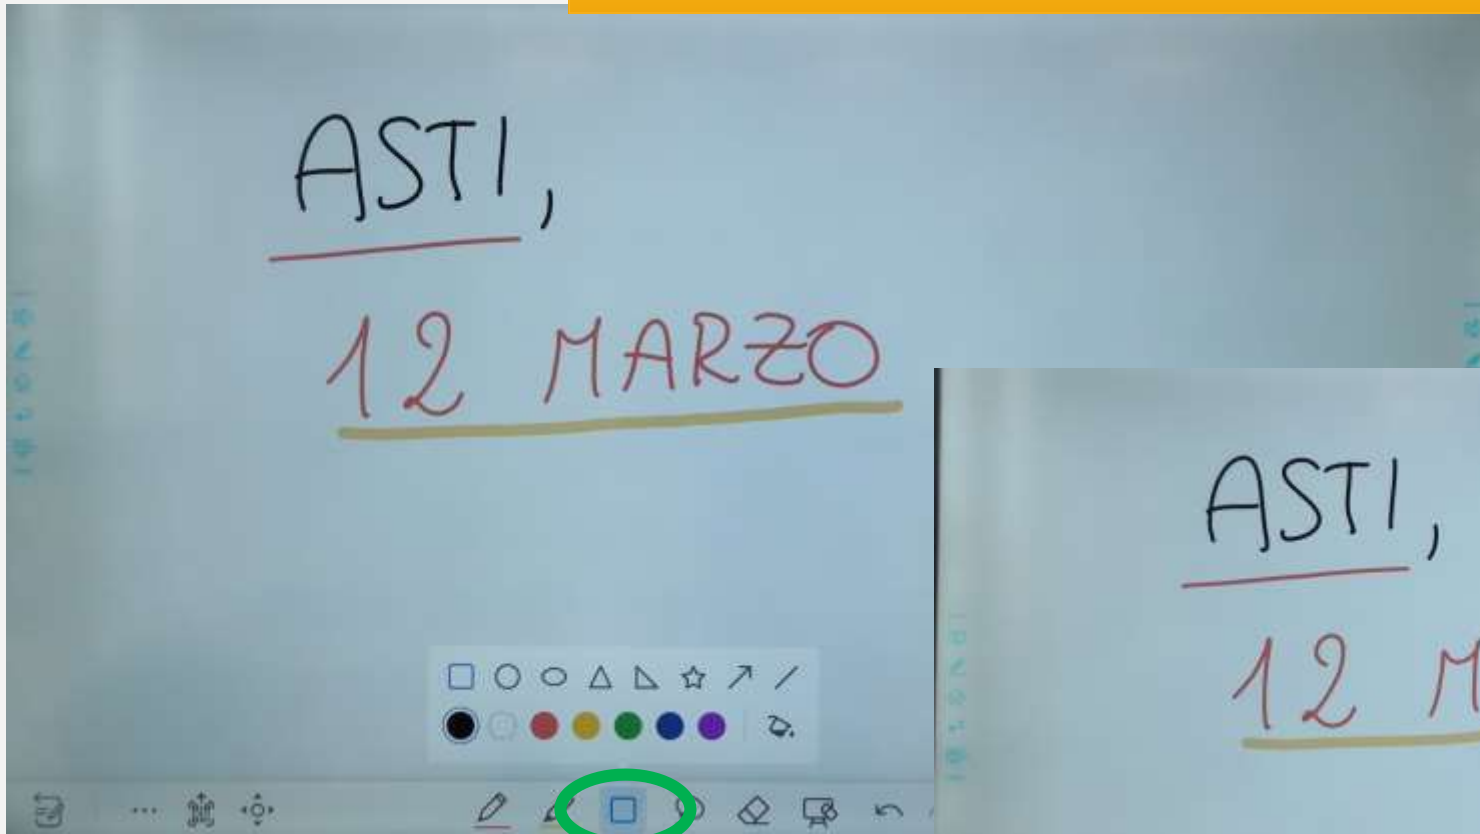


LAZO

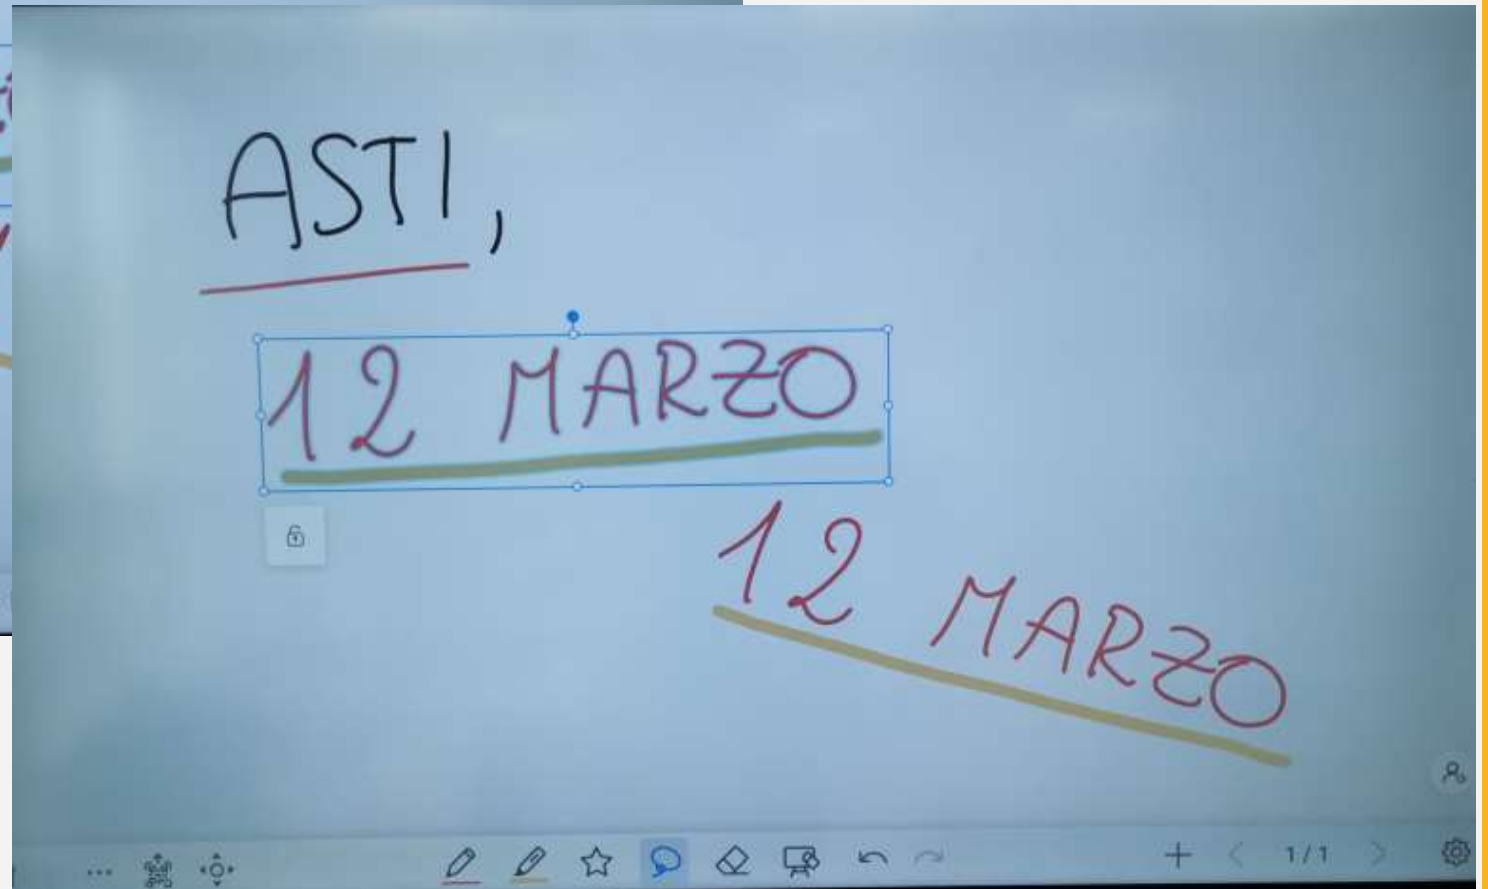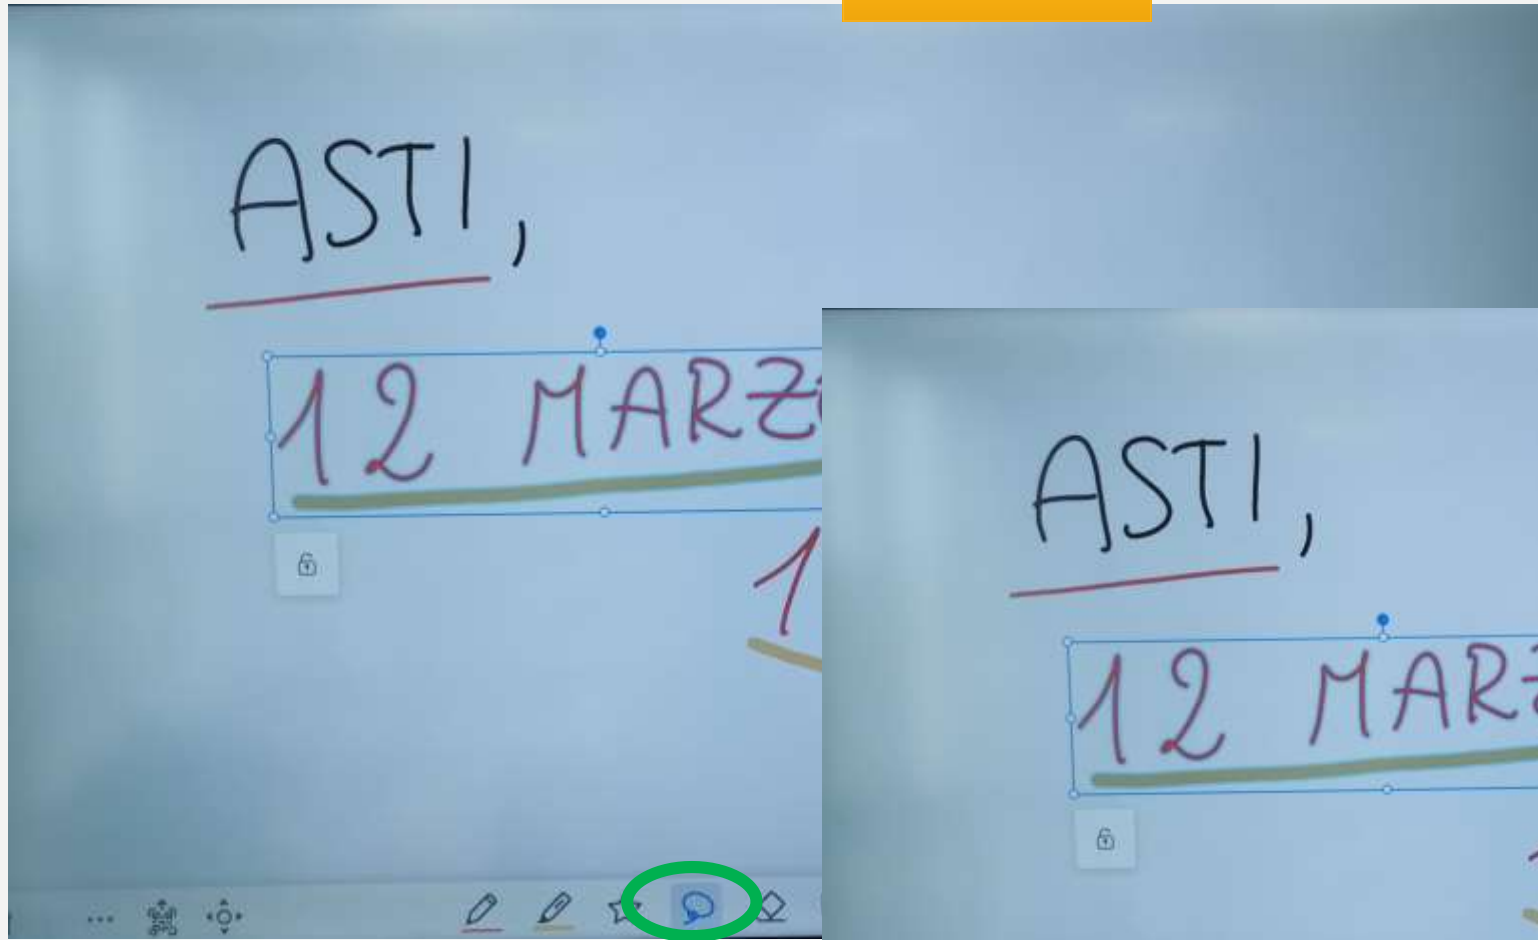


CANCELLARE






CANCELLARE

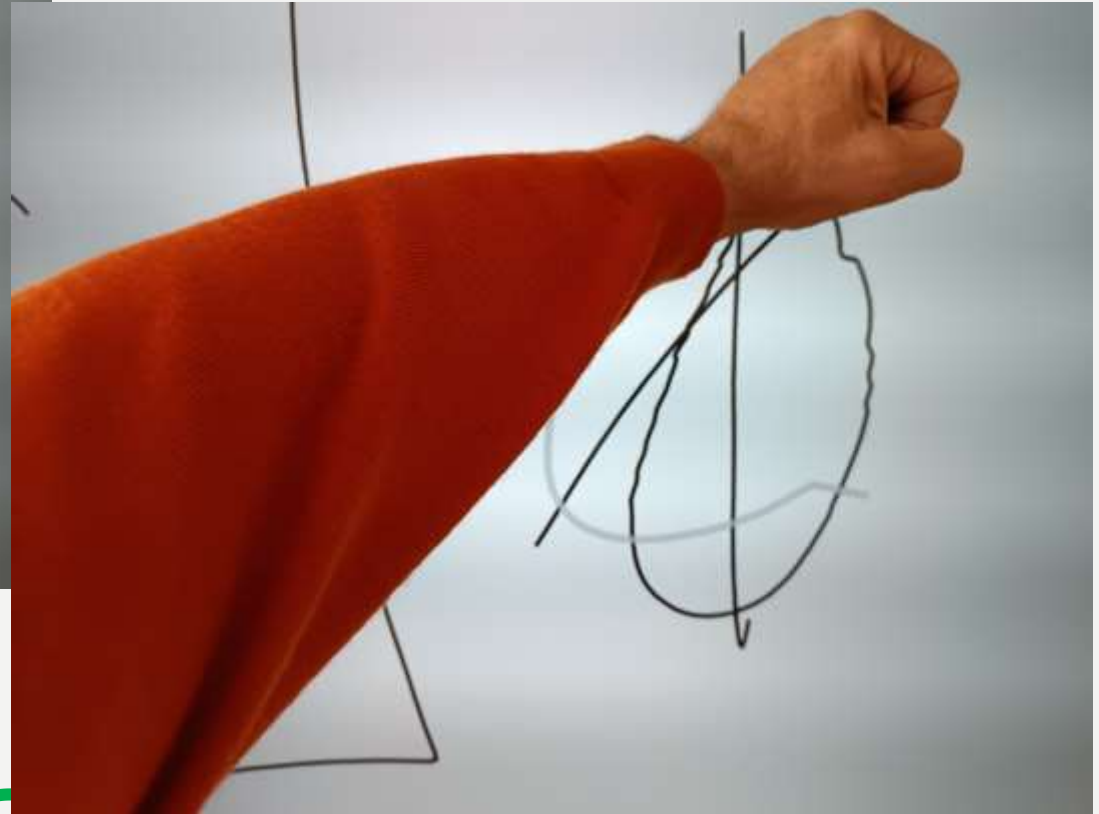


CANCELLARE

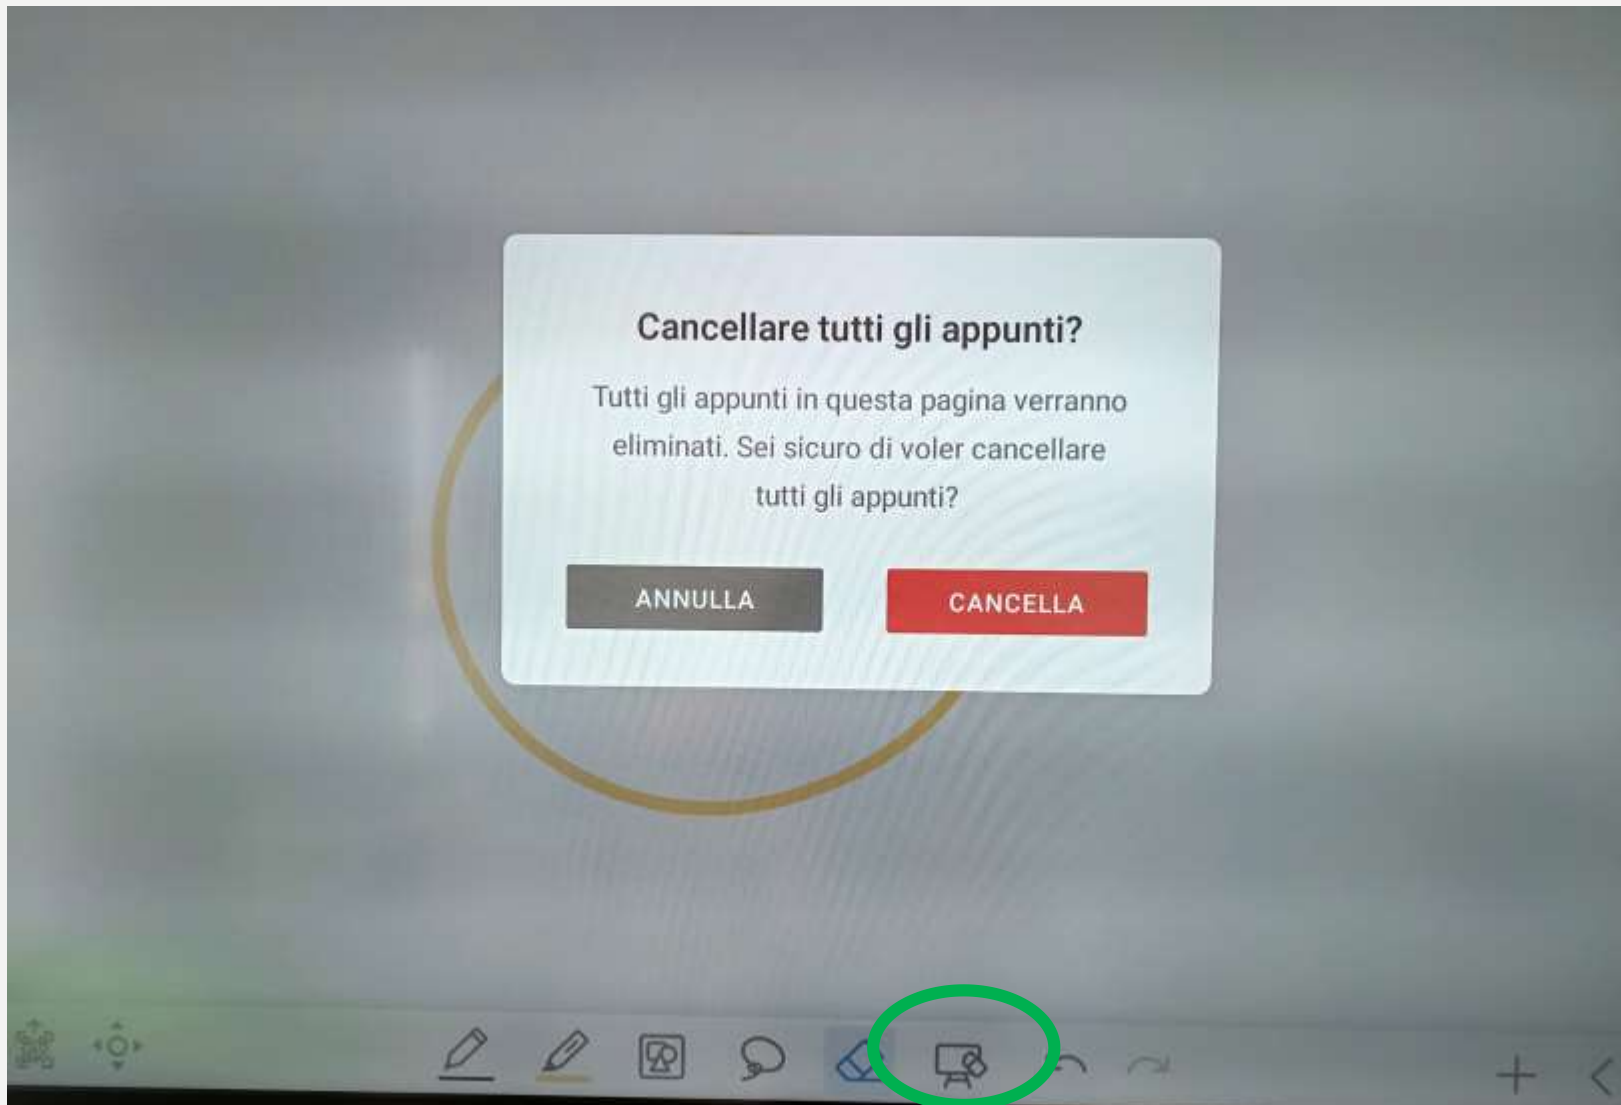


INSERIRE SFONDO

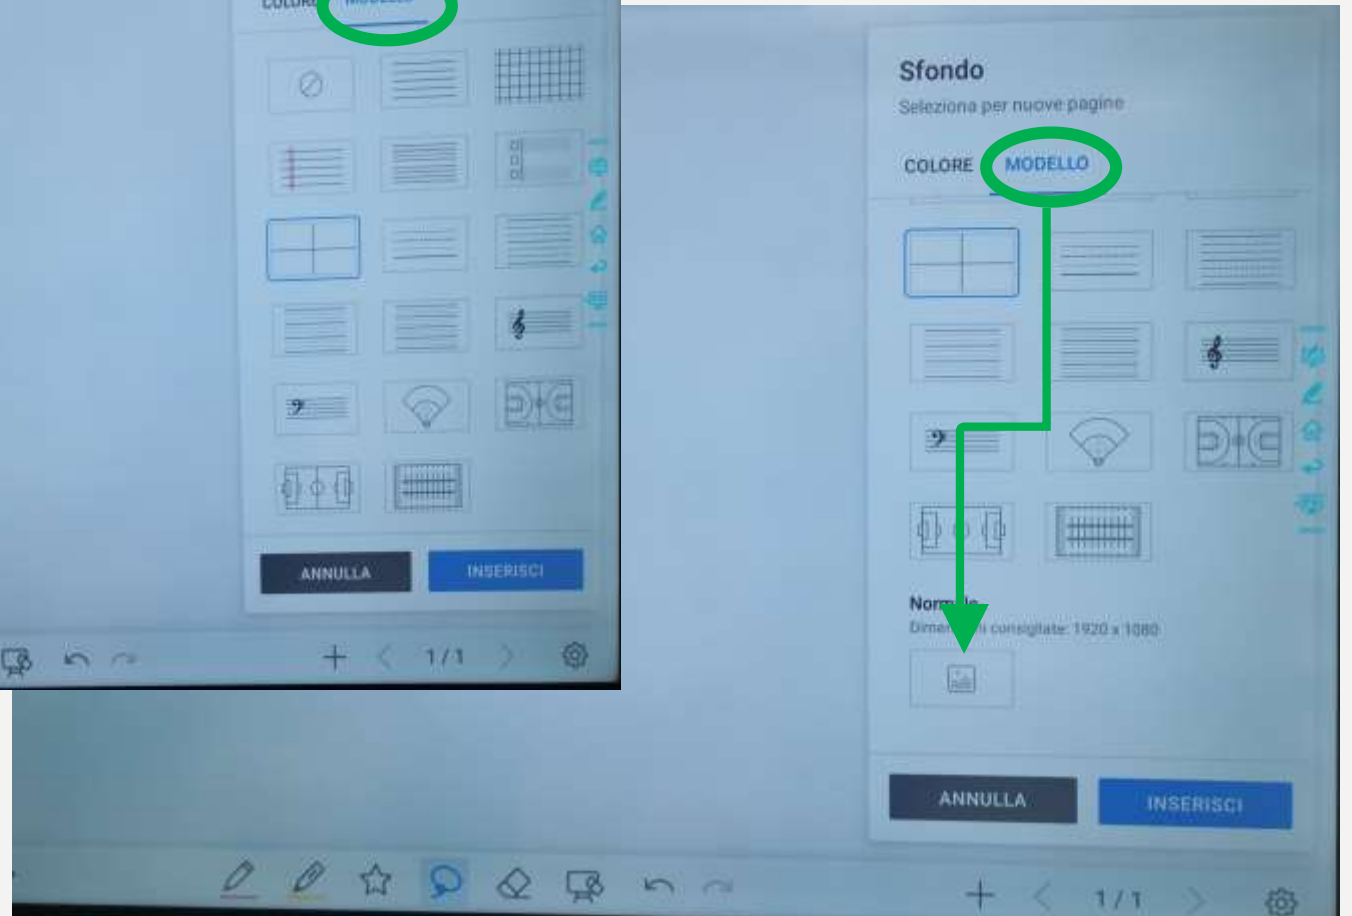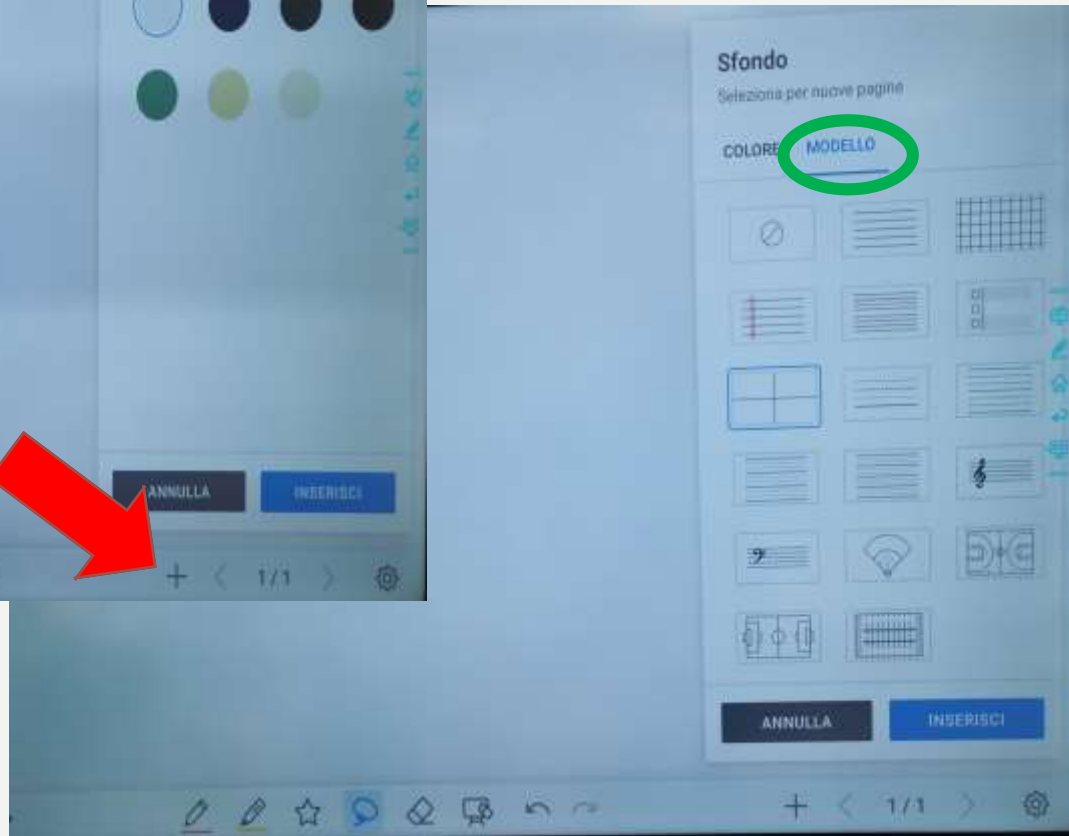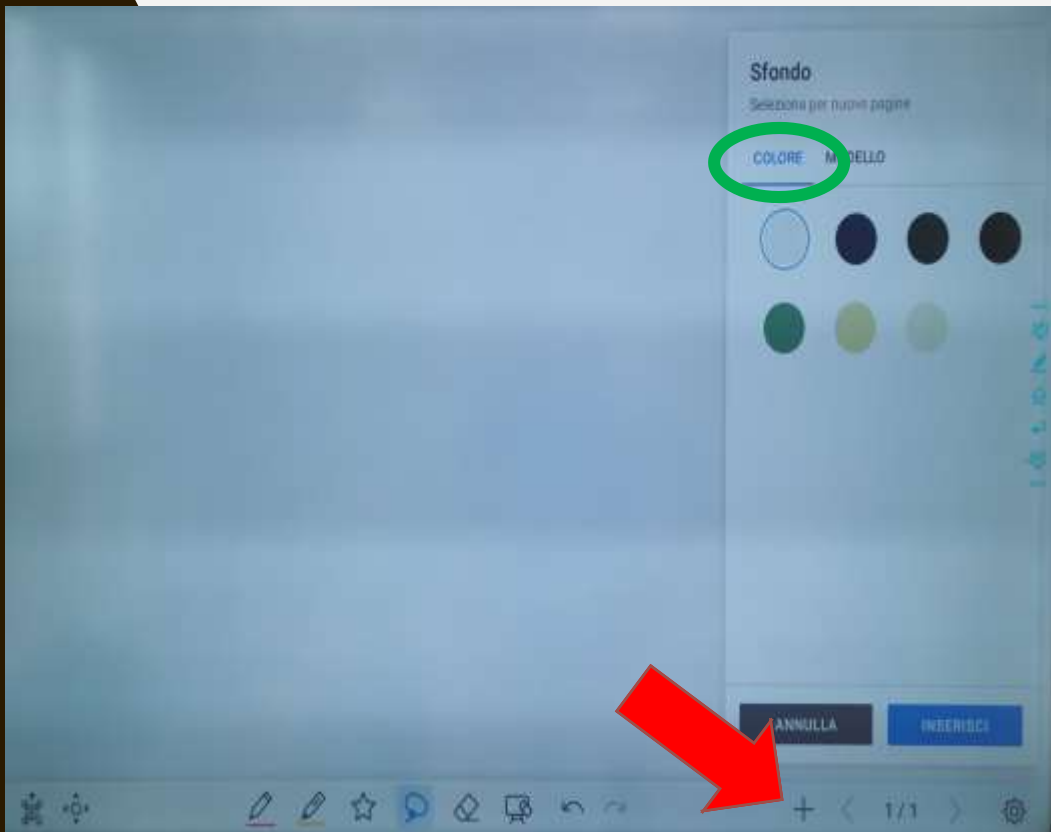

SETTAGGIO

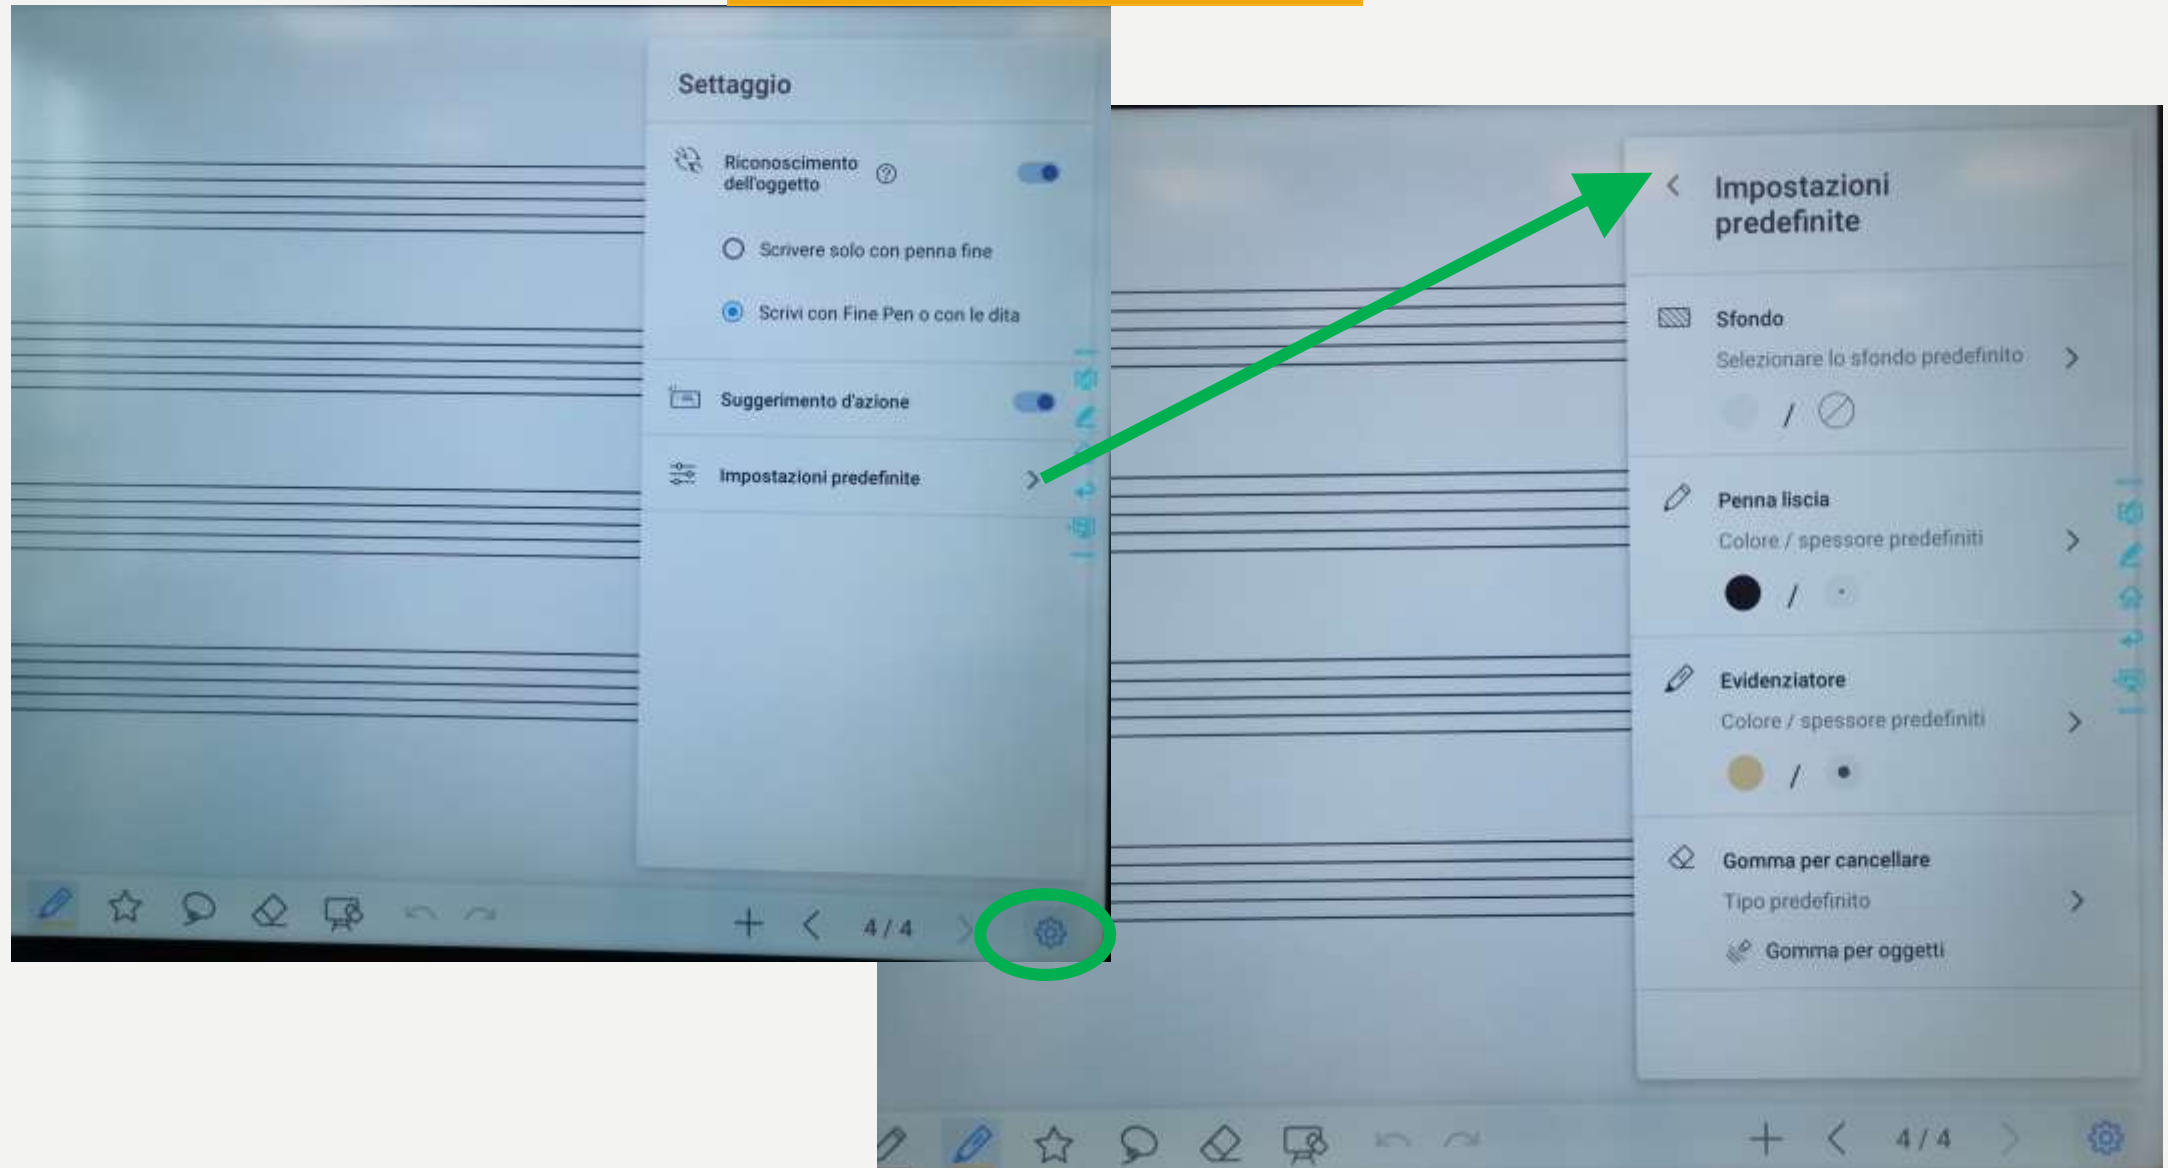

OPZIONI

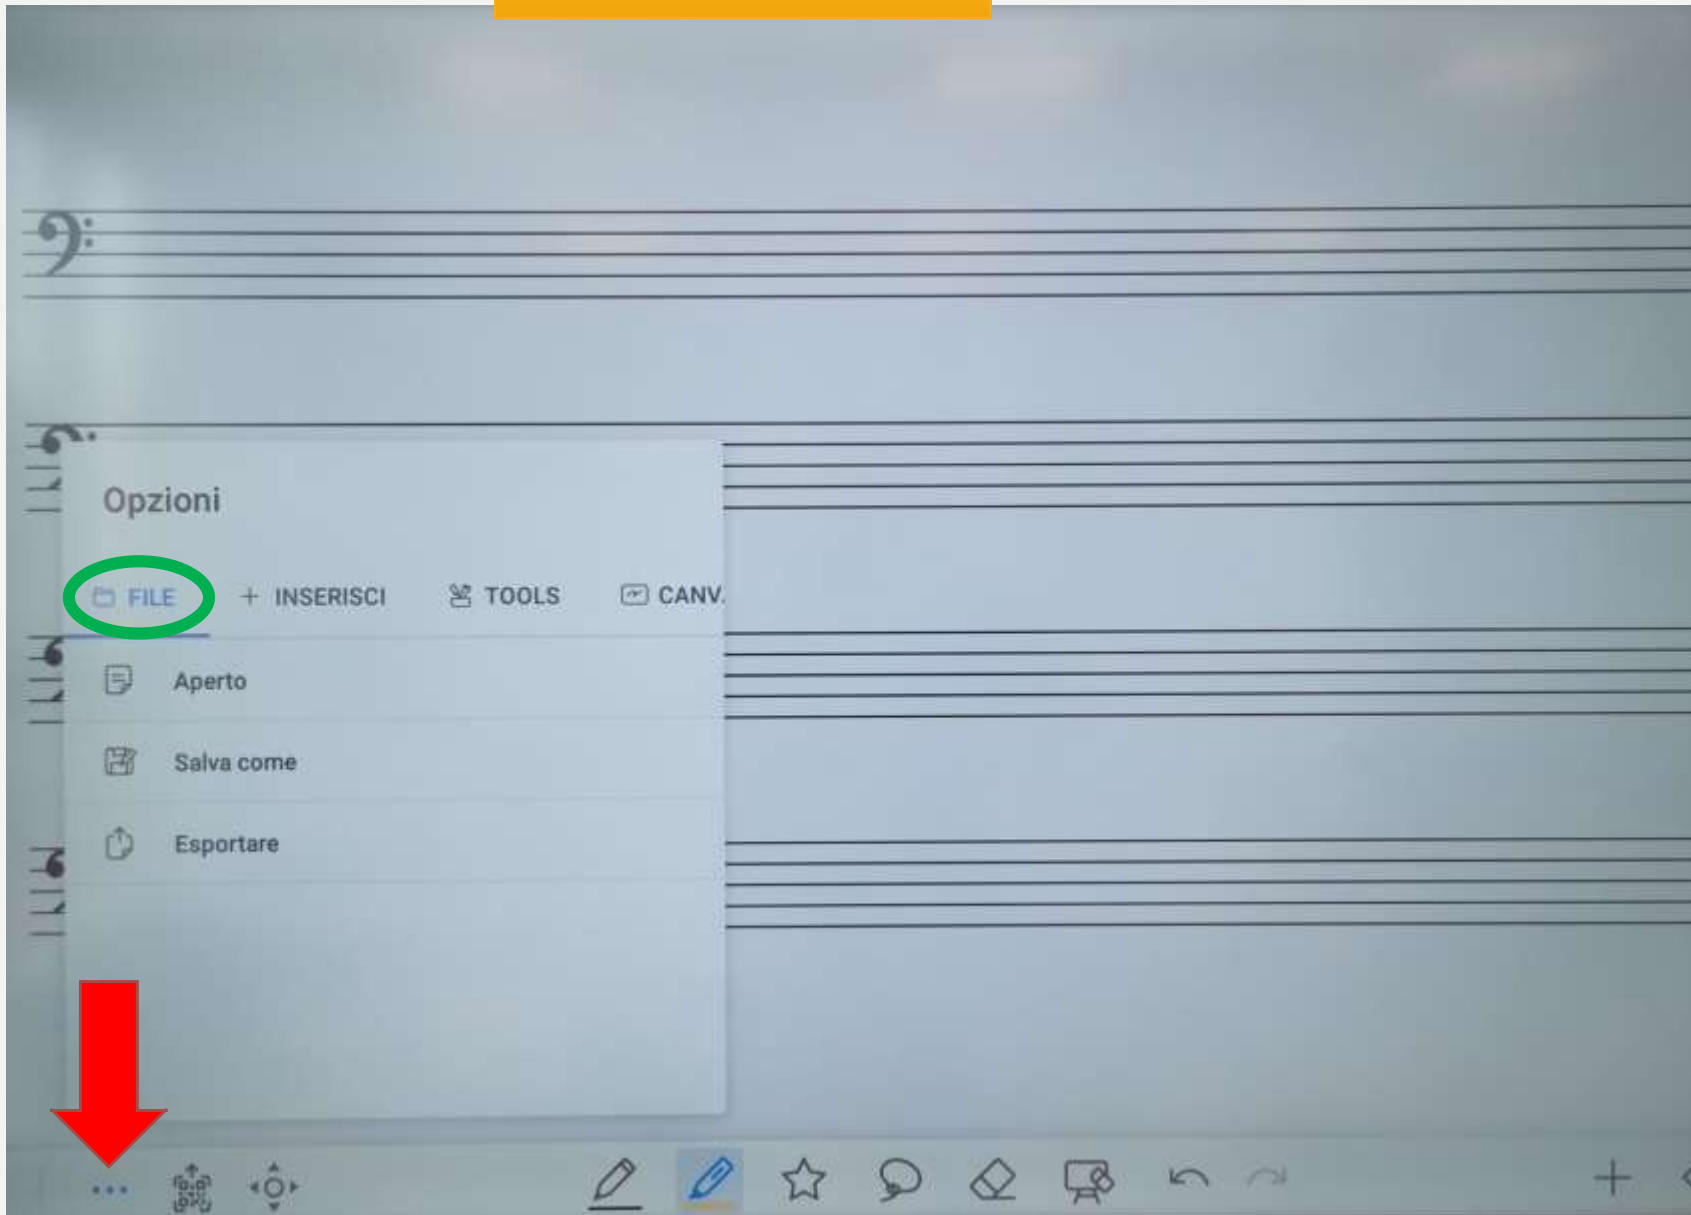

FILE


The screenshot shows the main interface of a music software application. On the left, a vertical menu titled "Opzioni" contains several items: "FILE" (circled in green), "+ INSERISCI", "TOOLS", and "CANV.". Below these are "Aperto", "Salva come", and "Esportare". A green arrow originates from the "FILE" menu and points to the "Esportare" dialog box on the right. The background shows musical staves with a bass clef.

This is a close-up of the "Esportare" dialog box. It features a dropdown menu for "Esporta pagine:" set to "Tutti". Below it, another dropdown menu for "Esporta come:" is set to "PNG", with a sub-menu open showing options for "PNG", "JPEG", and "PDF". To the right of these dropdowns are two buttons: "ANNULLA" (dark grey) and "ESPORTARE" (blue).


This is another view of the "Esportare" dialog box. The "Esporta pagine:" dropdown is now set to "Pagine selezionate". Below this, there is a section titled "Seleziona le pagine che desideri esportare:" with four page thumbnails labeled 1, 2, 3, and 4. Each thumbnail has a checkmark in its top right corner, indicating they are all selected. At the bottom, the "Esporta come:" dropdown is set to "PNG", and the "ANNULLA" and "ESPORTARE" buttons are visible.



INSERISCI

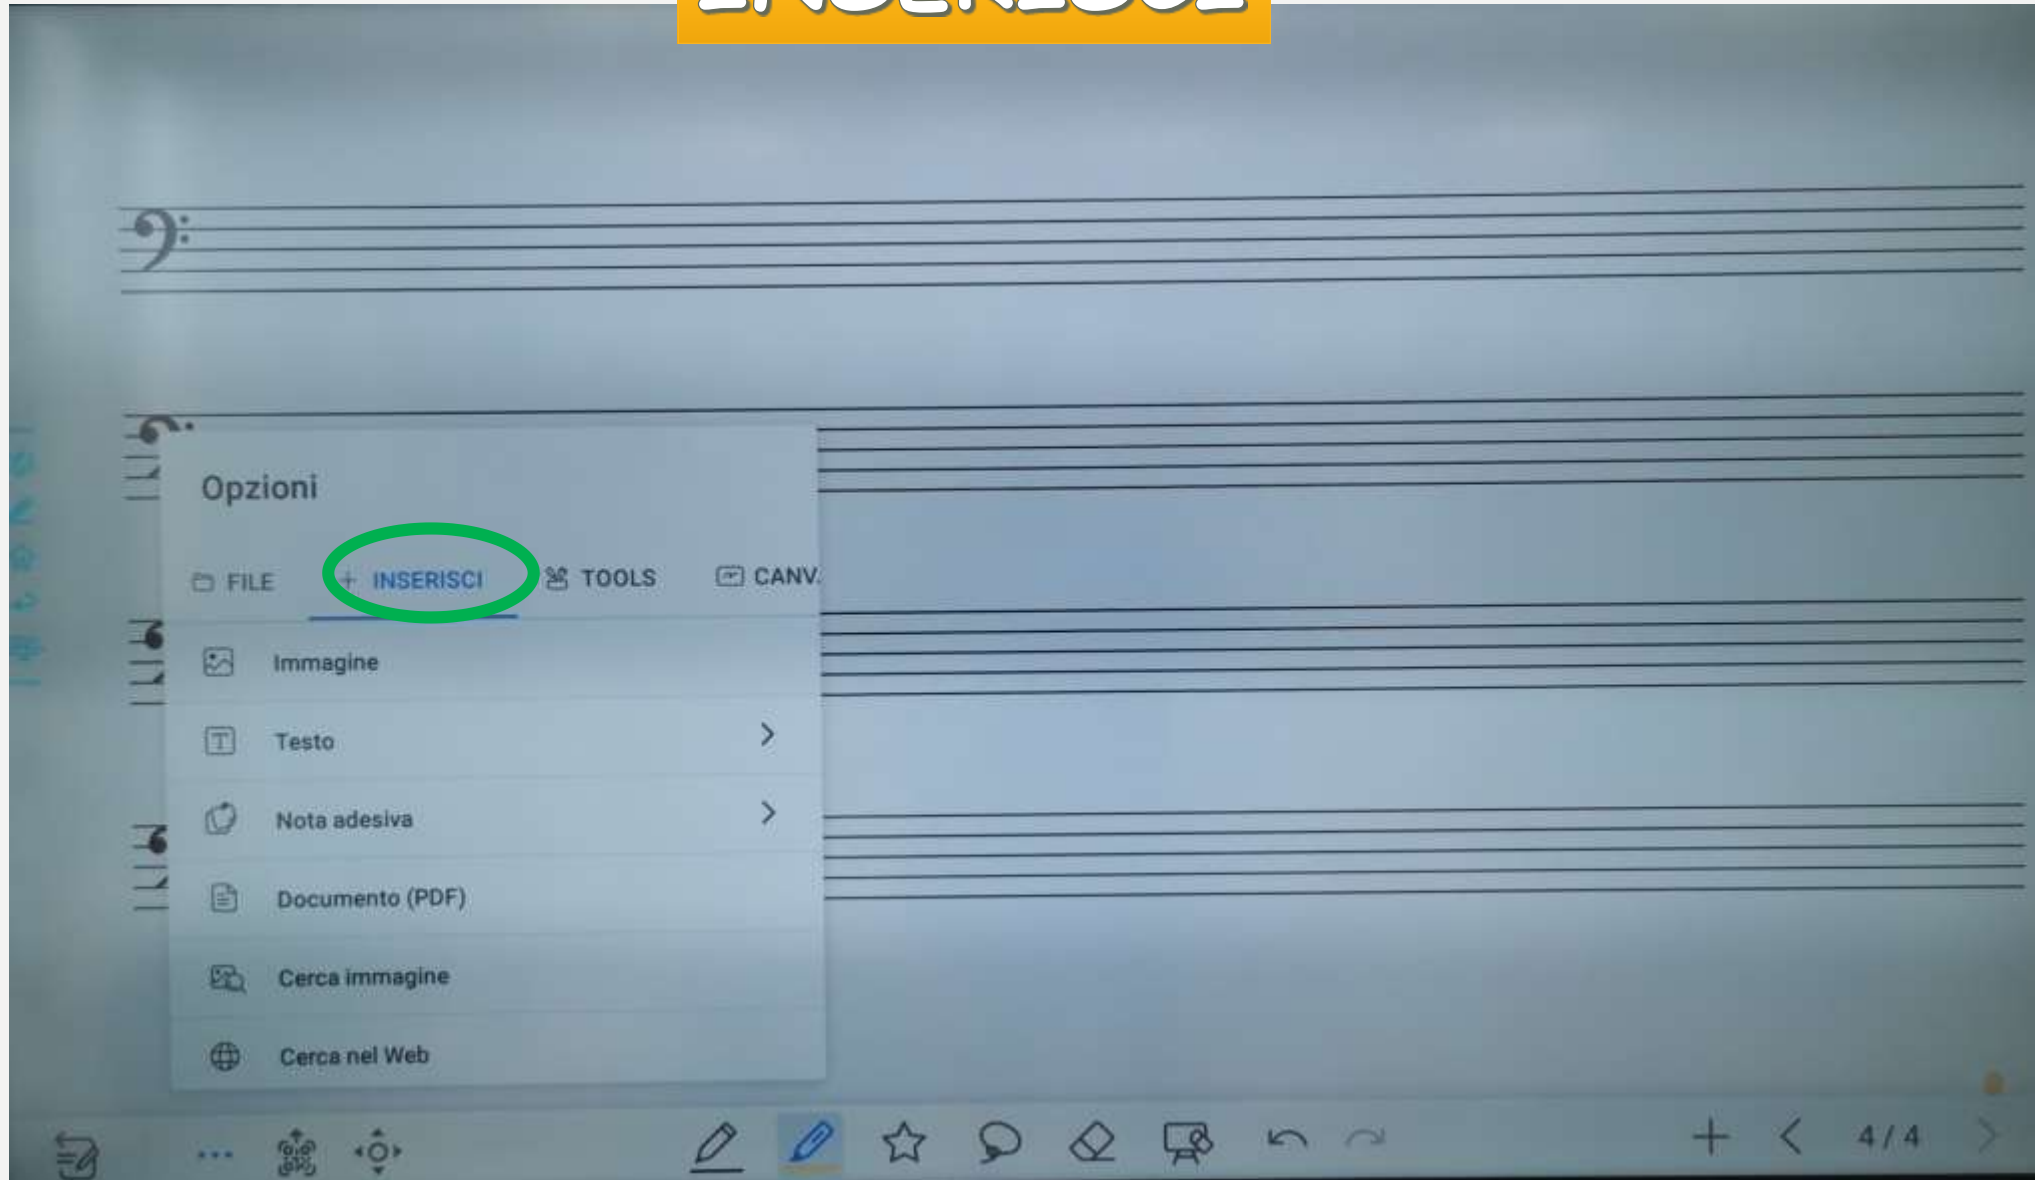


TESTO

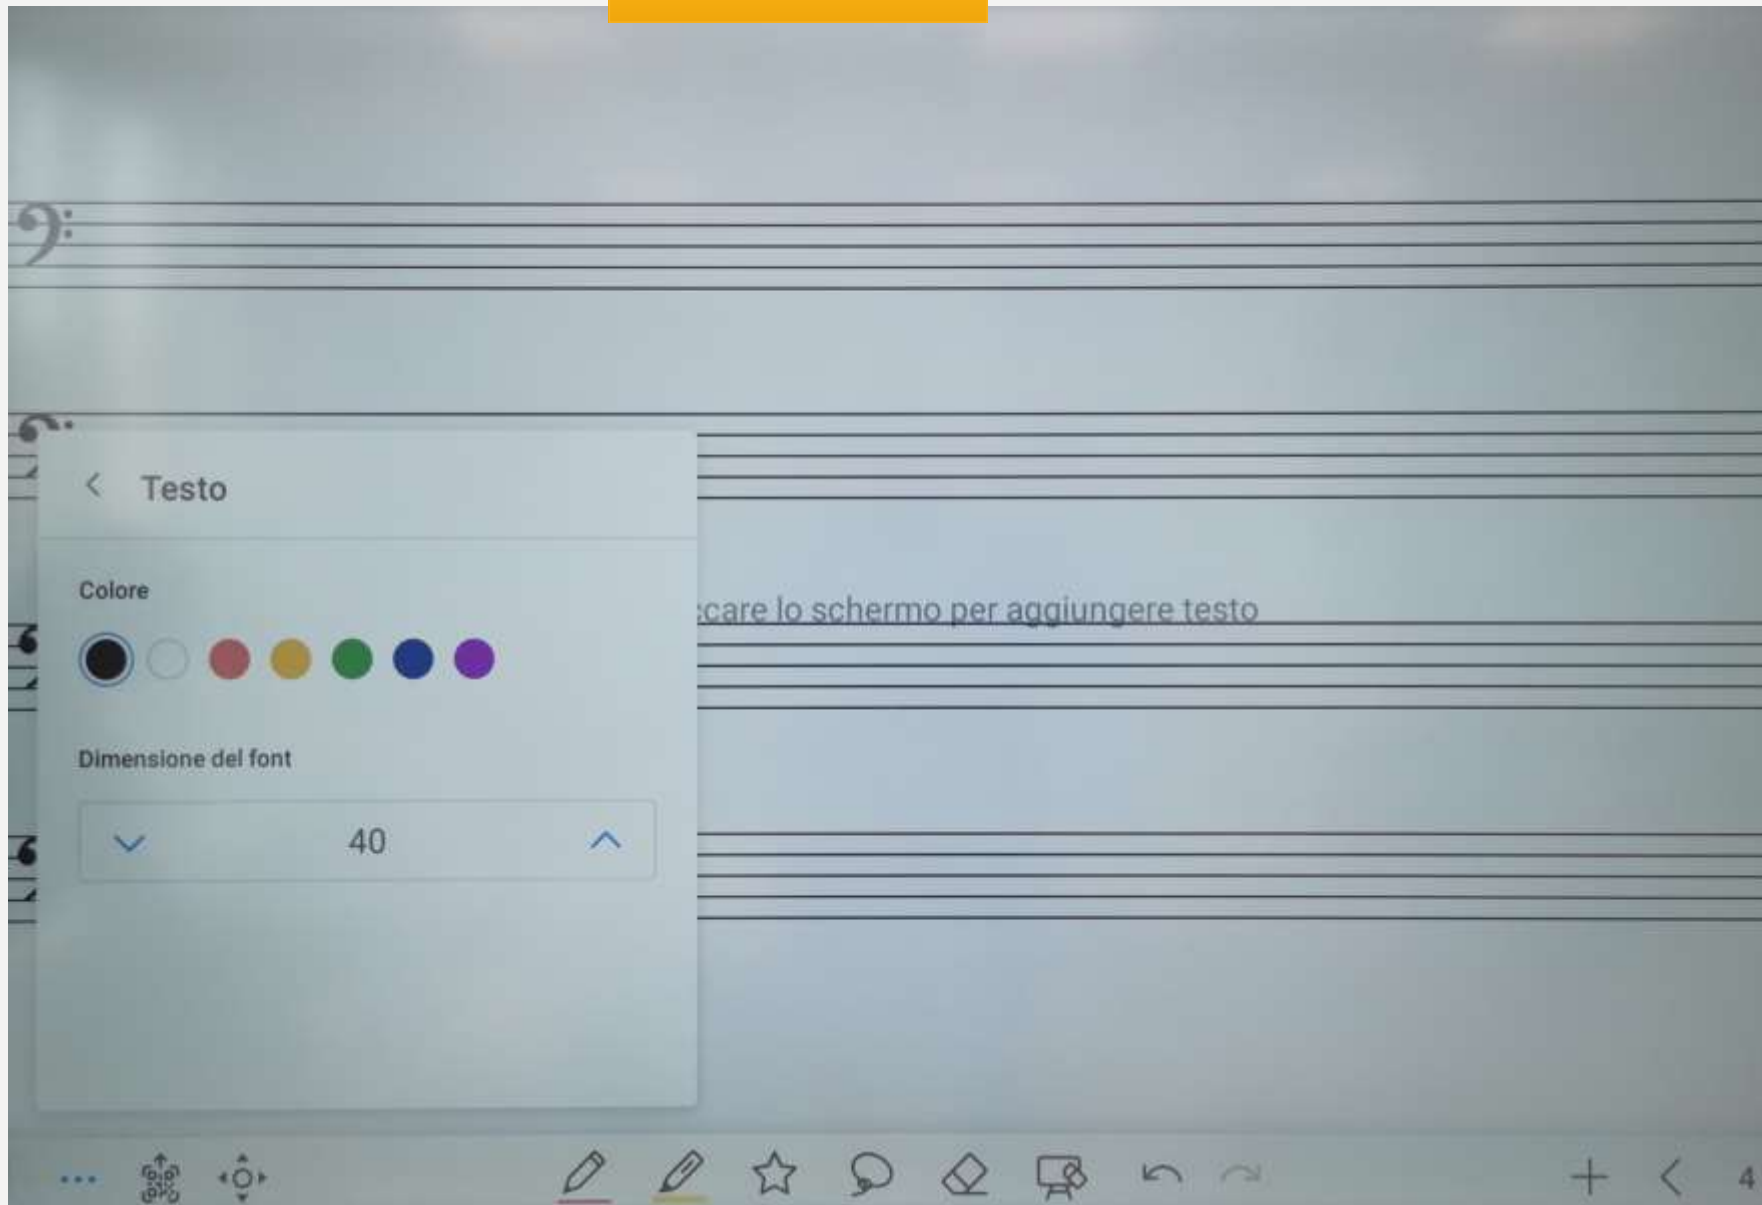


NOTA ADESIVA

The screenshot shows a music notation software interface with a light blue background. At the top, there is a yellow banner with the text "NOTA ADESIVA". Below this, there are several musical staves. A menu titled "Nota adesiva" is open, displaying six color swatches: light green, yellow, green, blue, purple, and dark purple. The first swatch (light green) is highlighted with a blue border. To the right of the menu, the text "con una penna per scegliere la posizione." is visible. At the bottom of the screen, there is a toolbar with various icons, including a pencil, a star, a speech bubble, a diamond, a monitor, and navigation arrows. The page number "4/4" is visible in the bottom right corner of the interface.


CERCA IMMAGINE

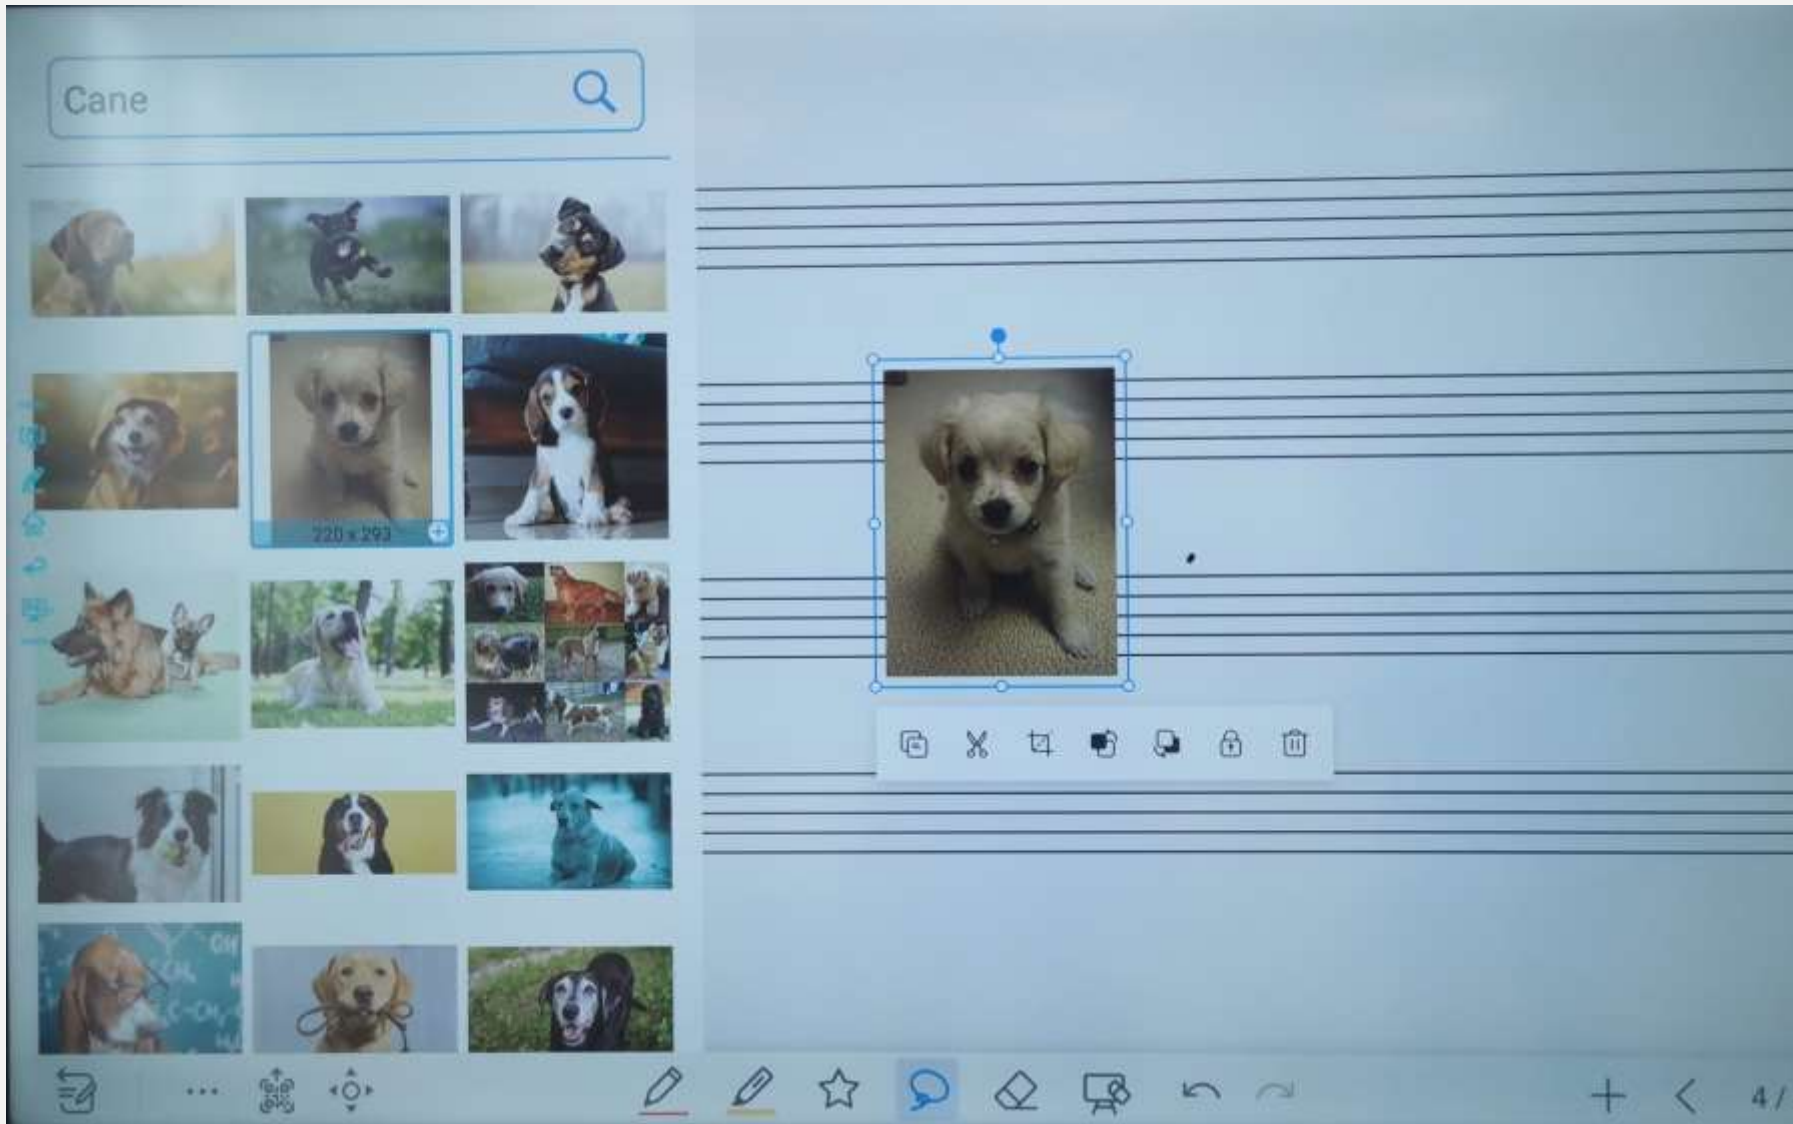


CERCA NEL WEB


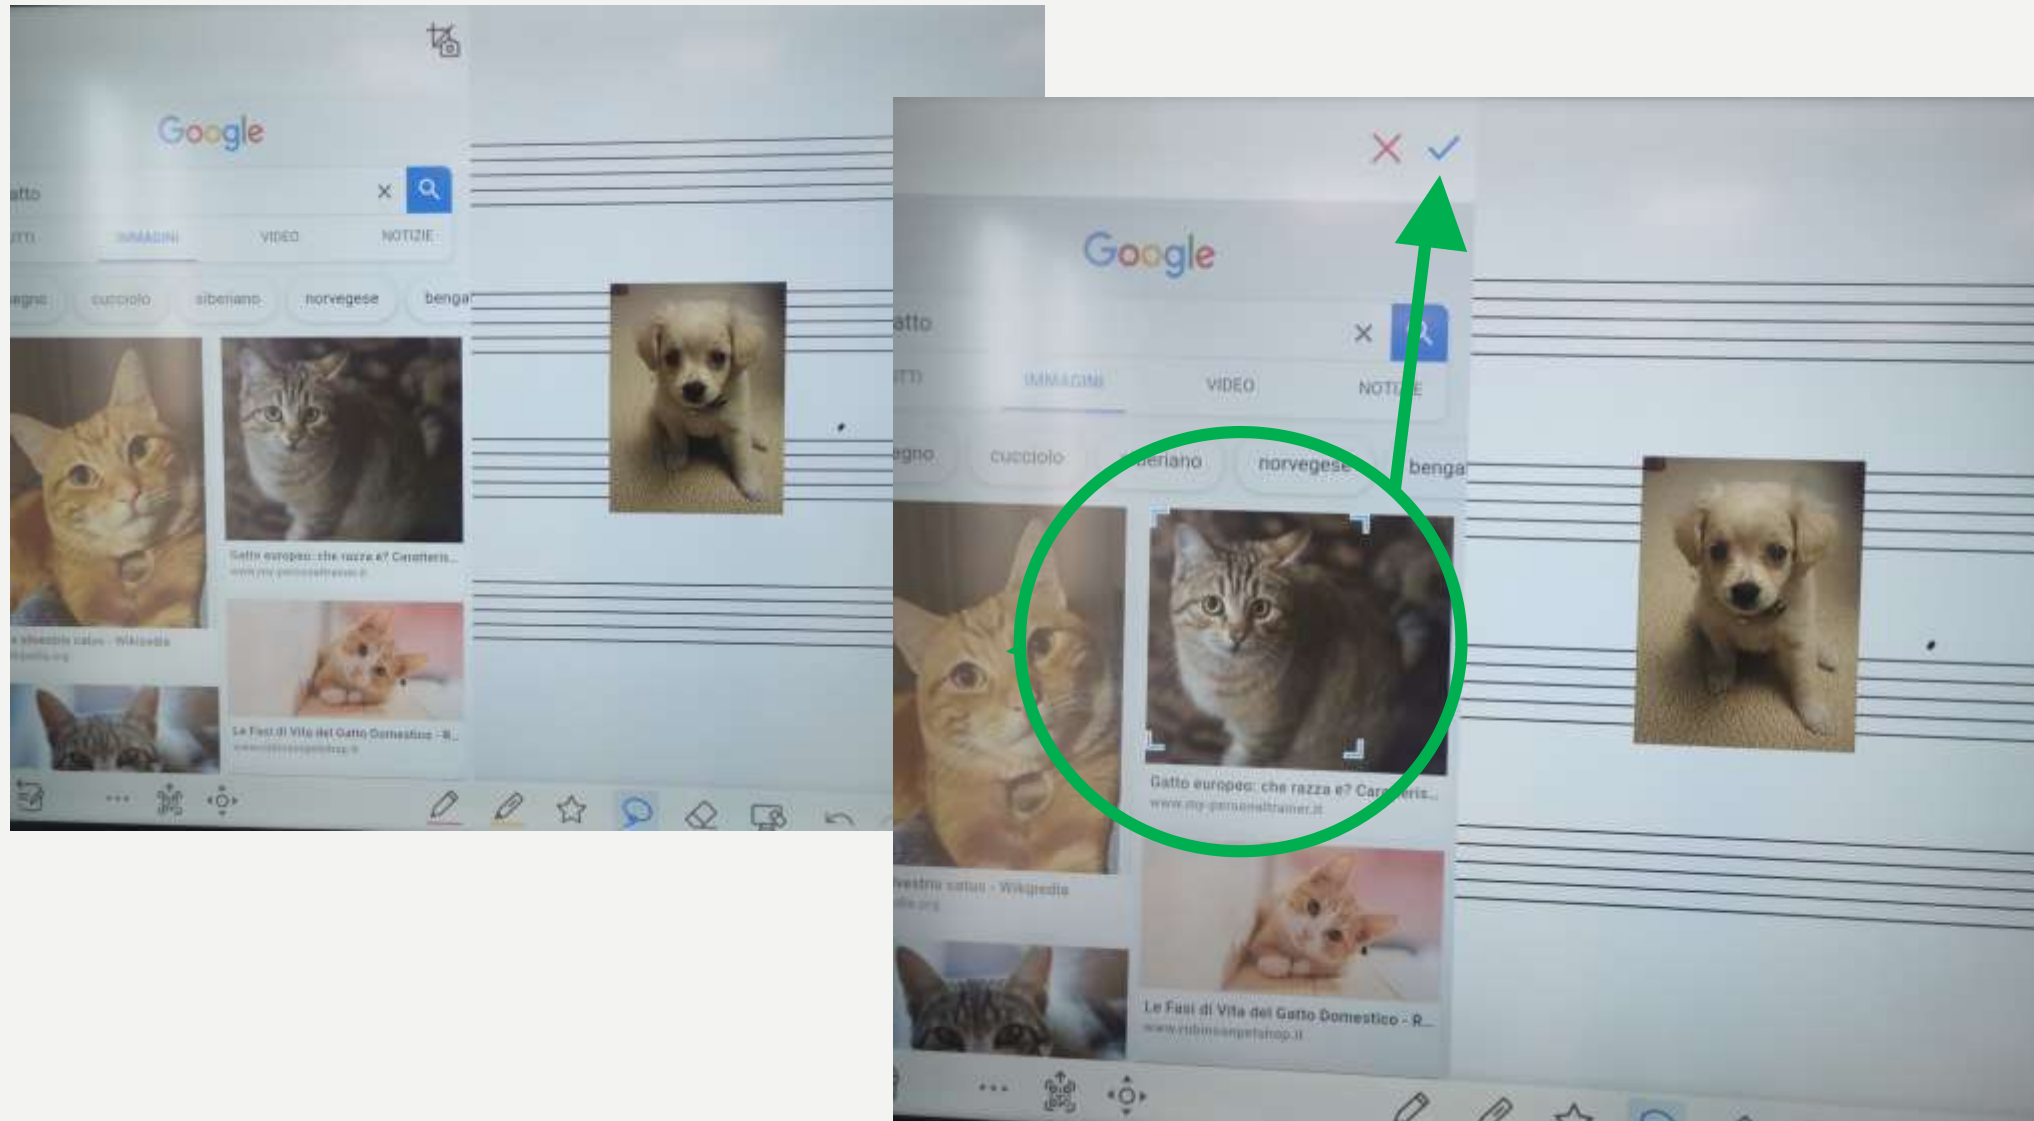




TOOLS

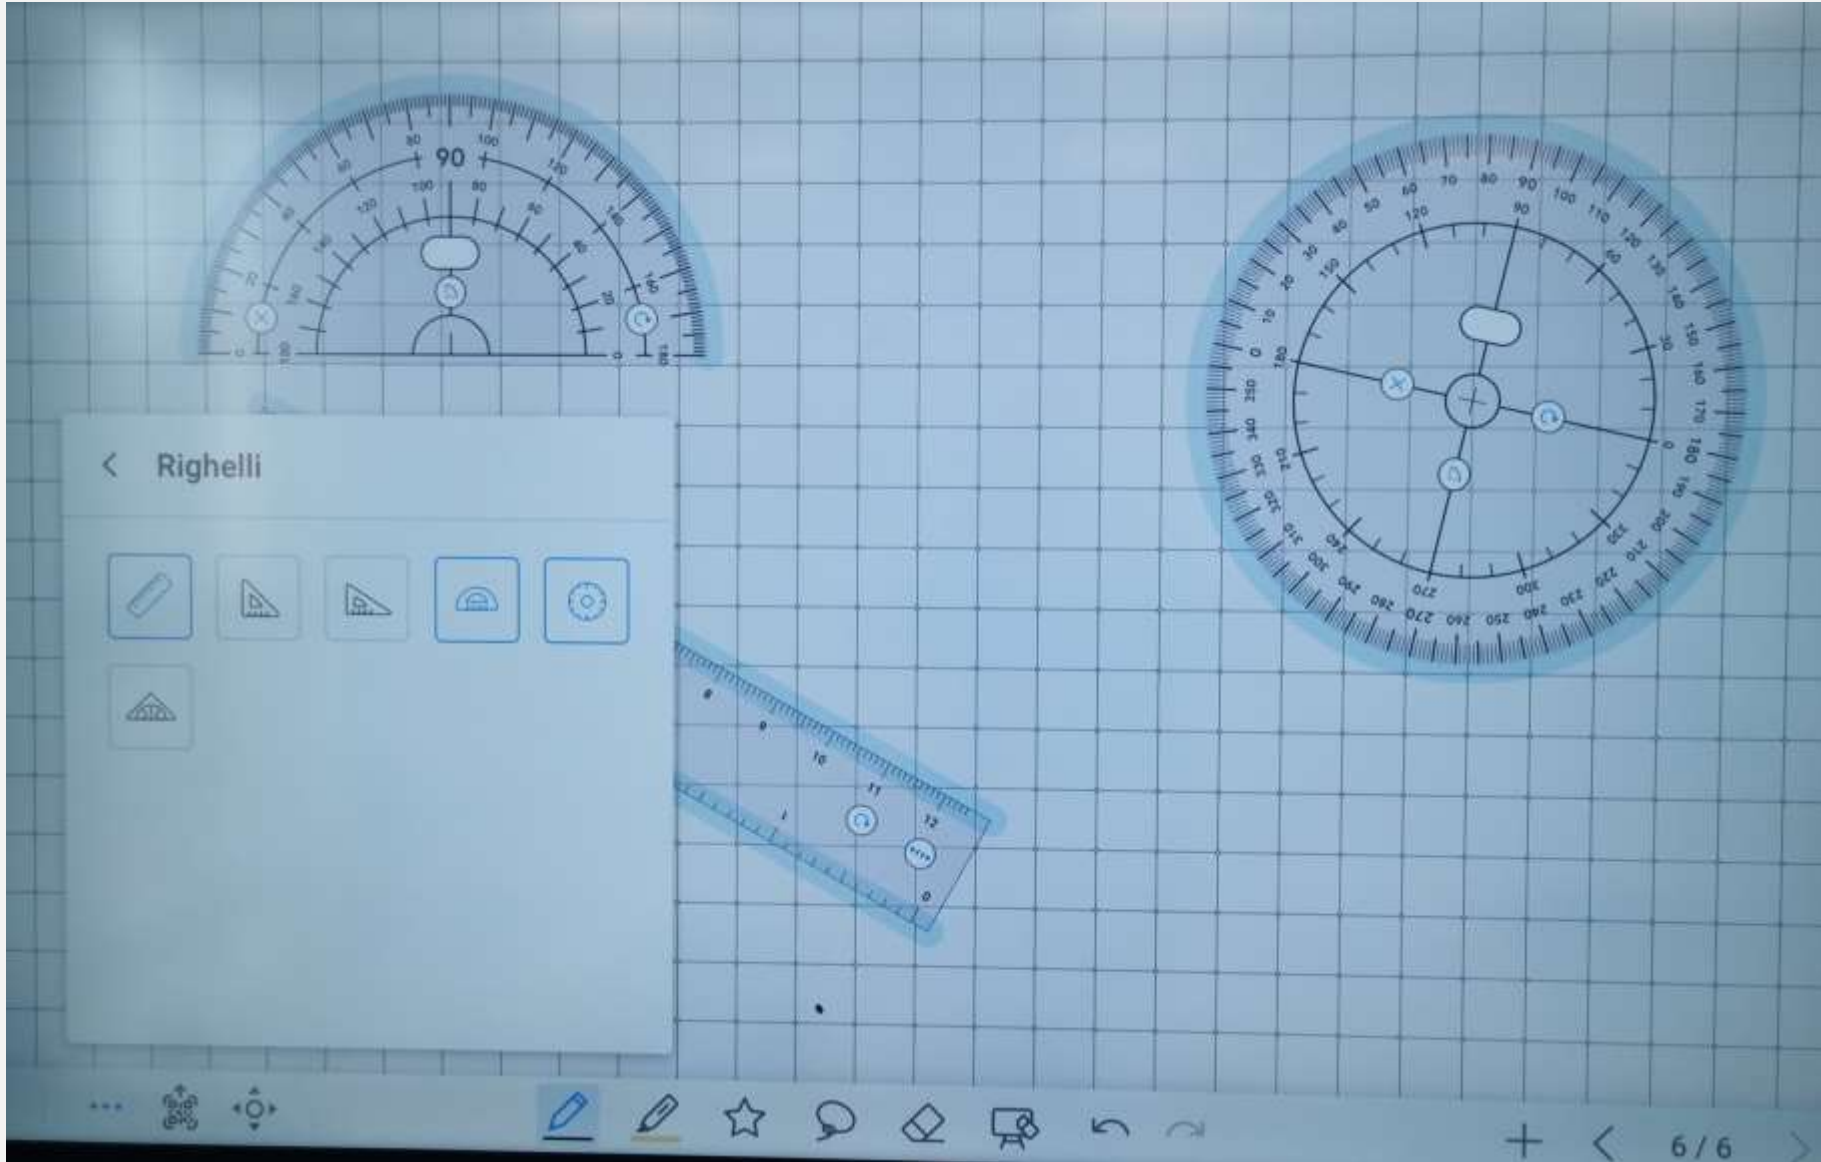



CANVAS

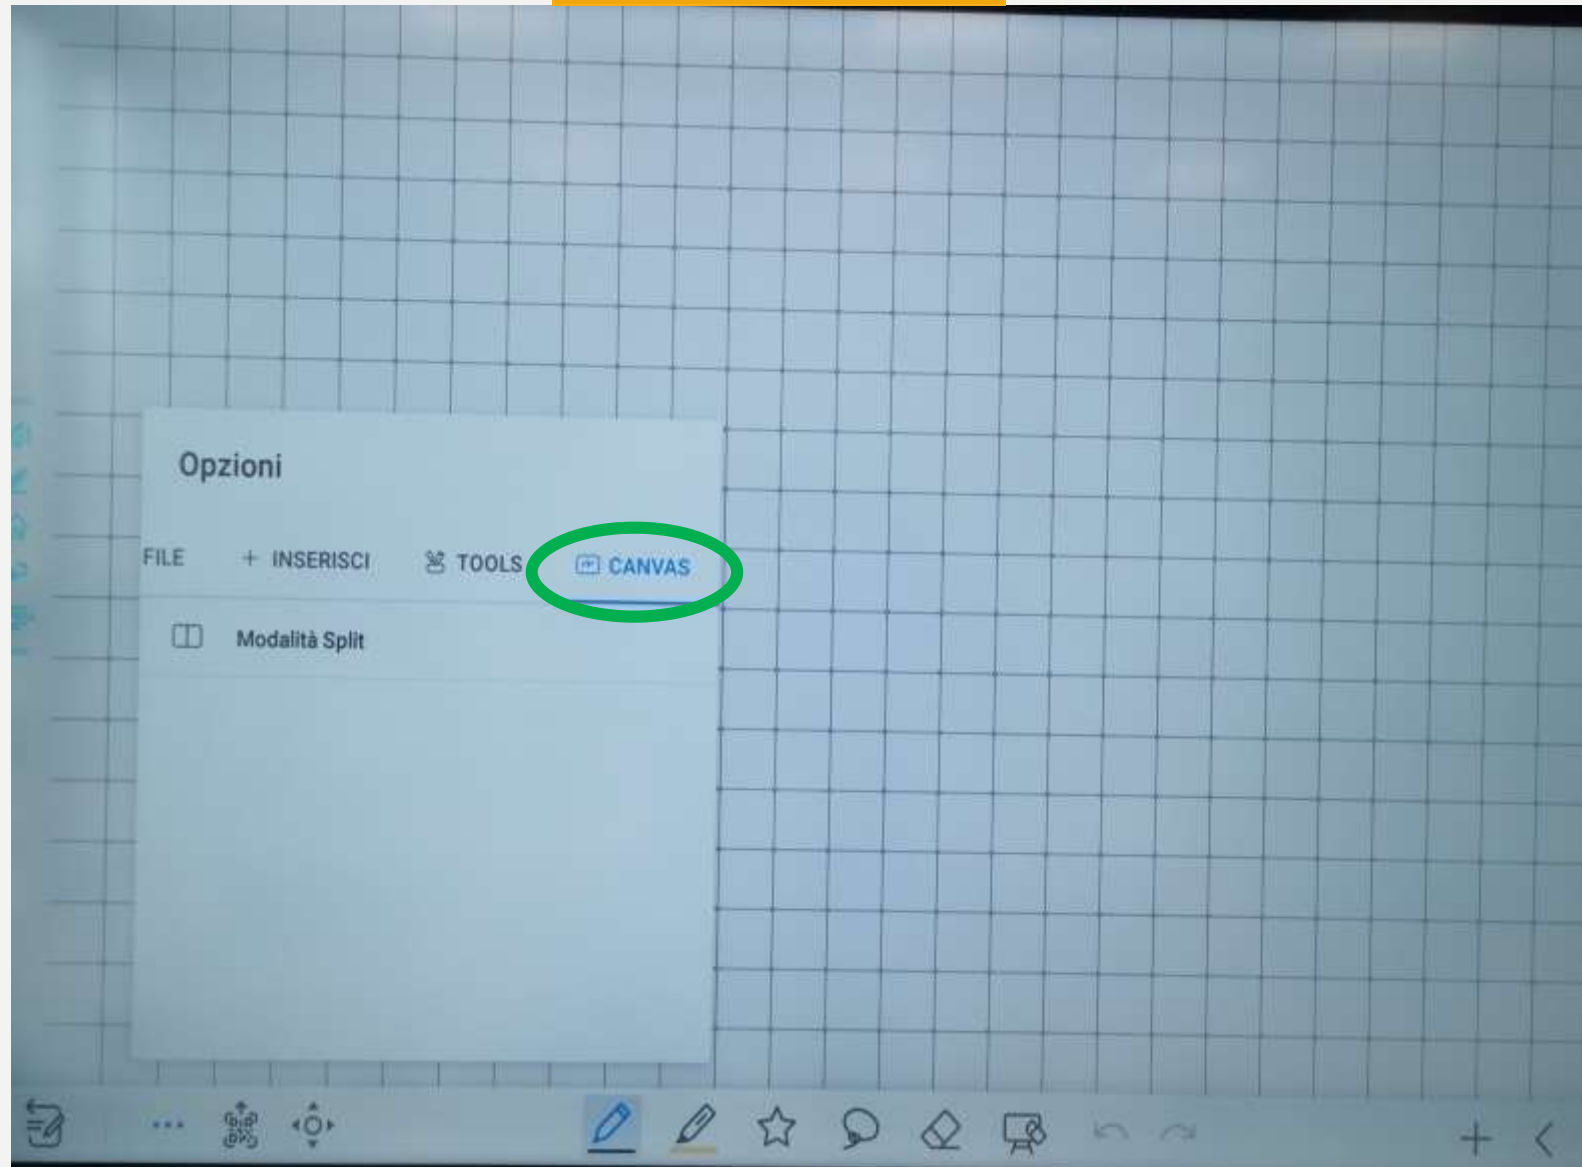

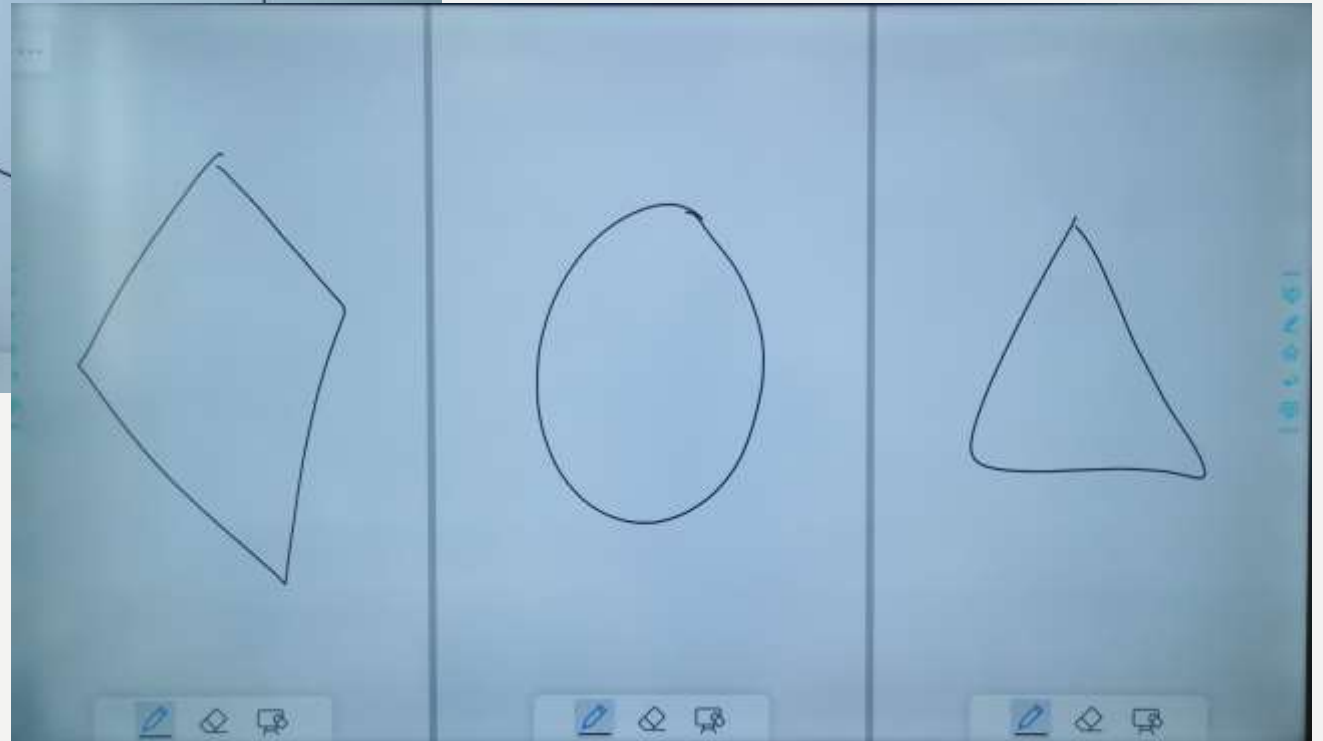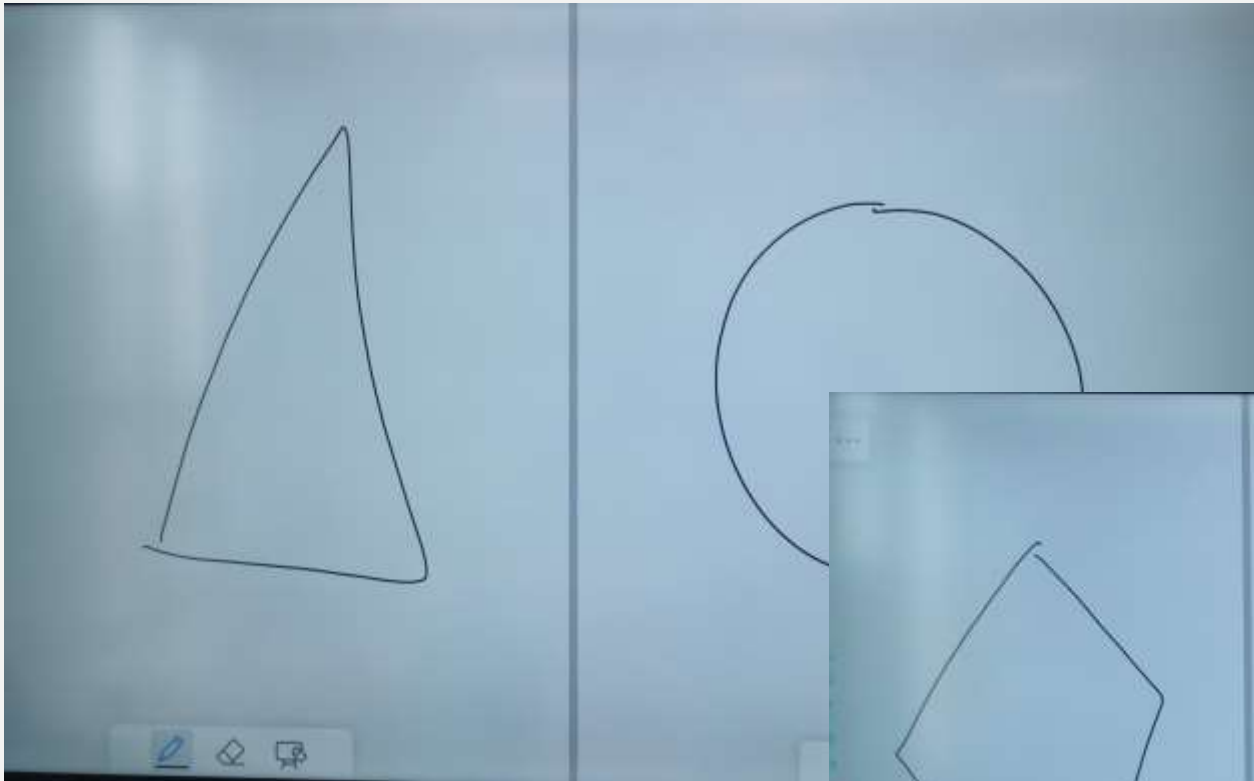

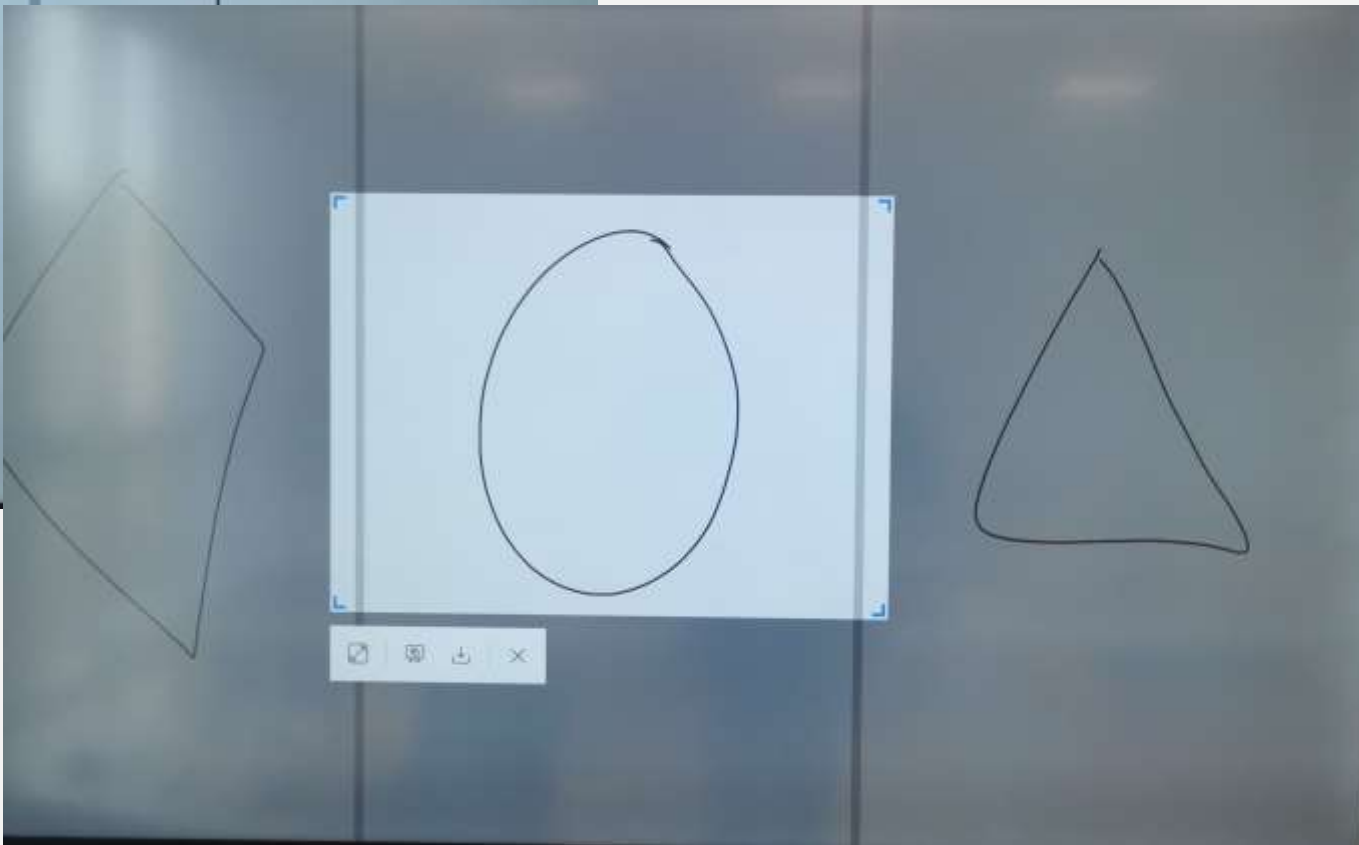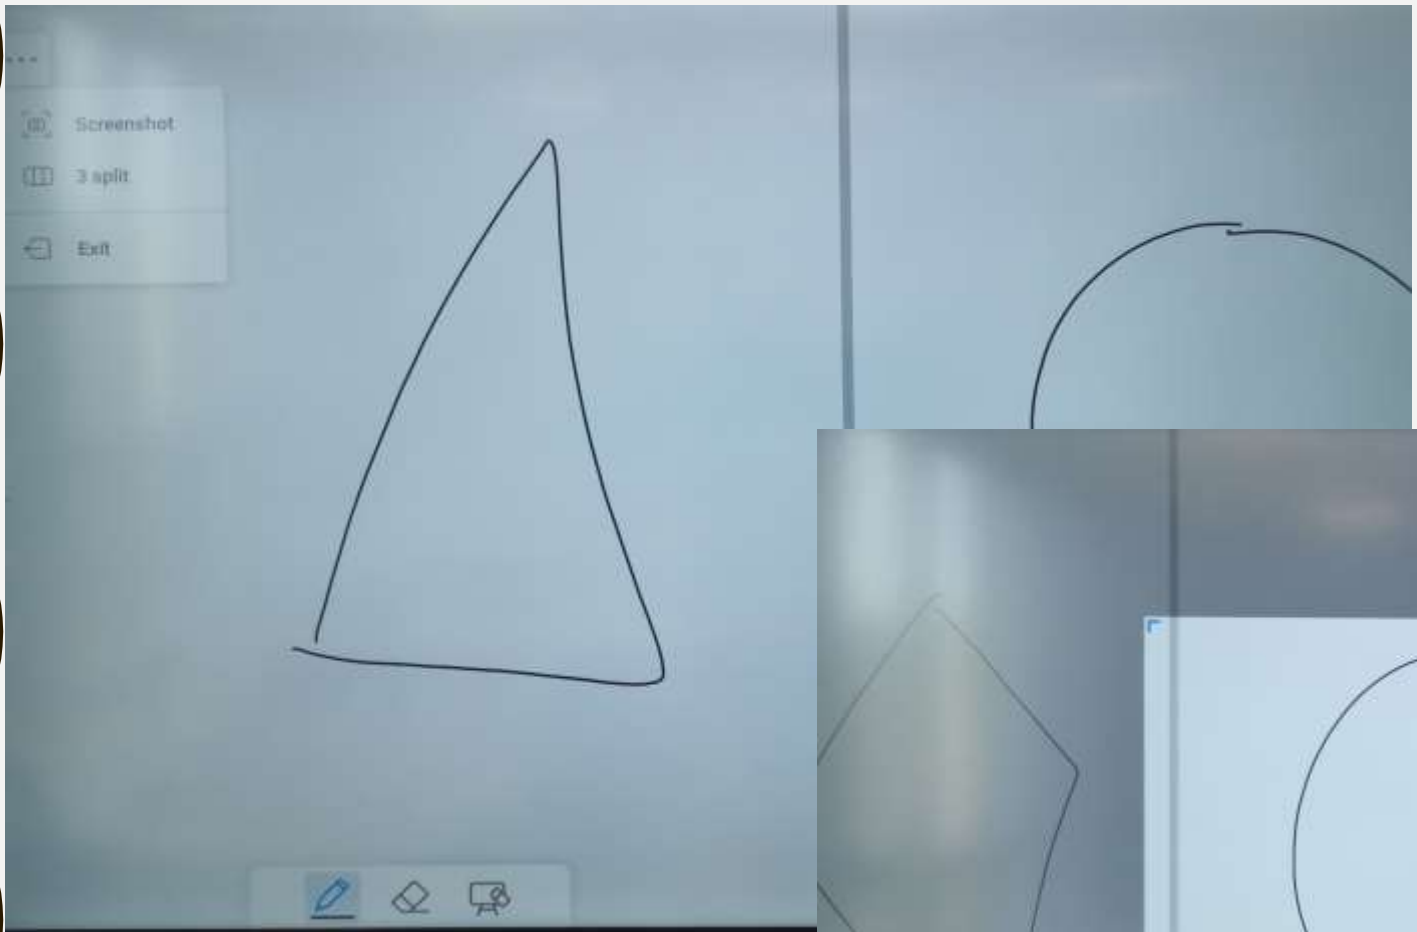

SCHERMATE

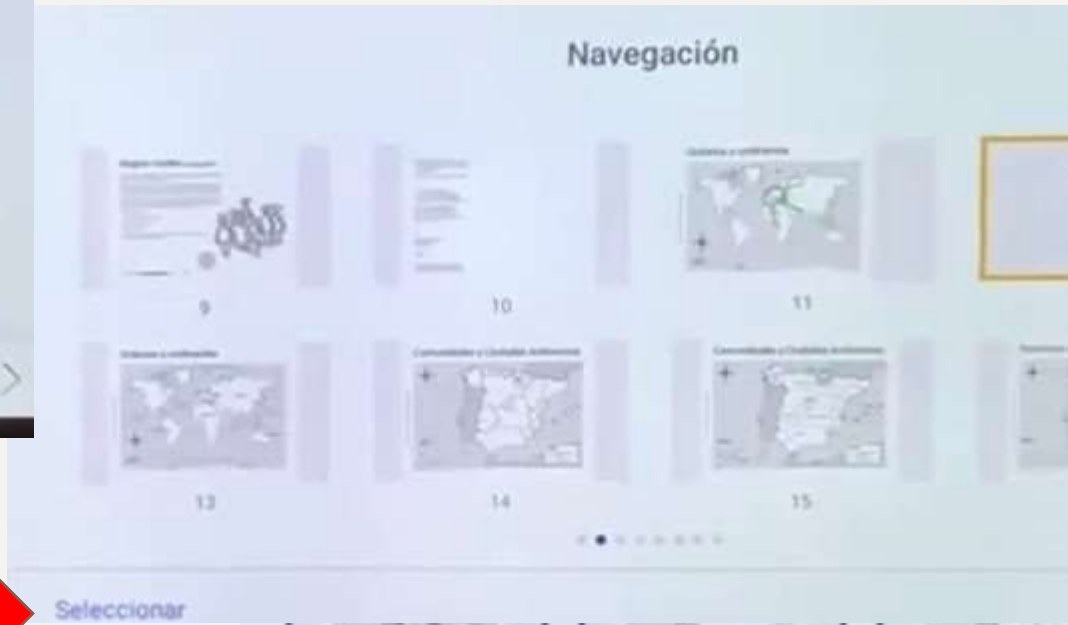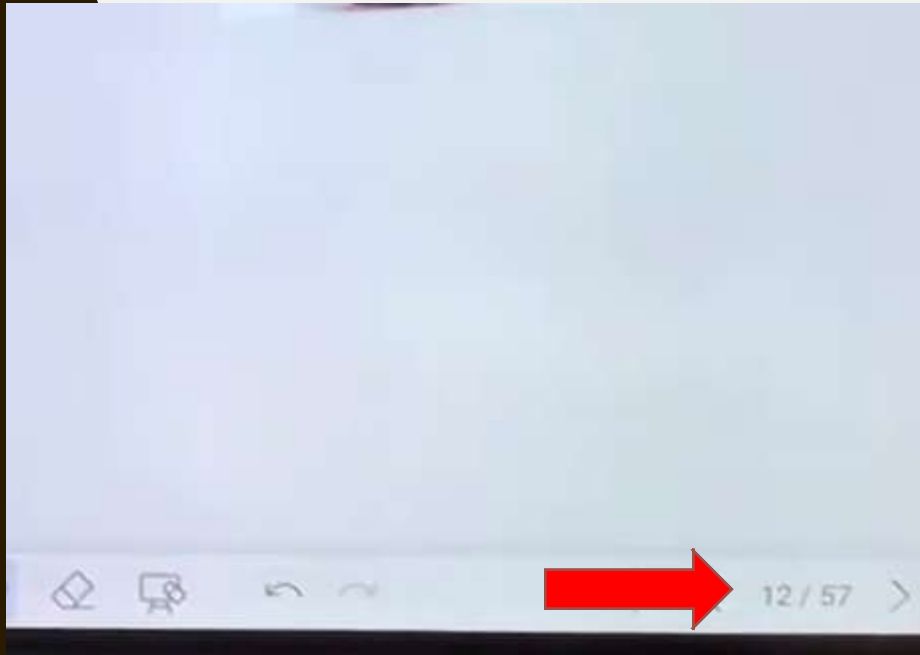

DIGITAL BOARD NEW LINE

